




# L15

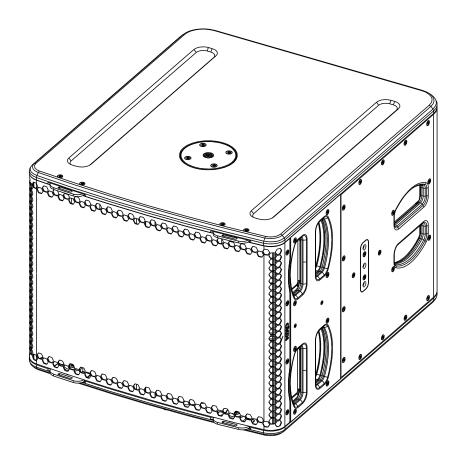

User manual



# **TABLE OF CONTENTS**

TABLE OF CONTENTS	2
WARNINGS	3
EQUIPMENT	4
DESCRIPTION	5
PRESET	6
ACCESSORIES	8
ARRAY EQ	10
MAINTENANCE	11
TECHNICAL SPECIFICATIONS	13
USER NOTES	14

## **EU Conformity declaration**

We, NEXO SA

ZA DU PRE DE LA DAME JEANNE

60128 PLAILLY - France

Declare under our sole responsibility that the product 
Loudspeaker

Type L15

Serial number On the product

Is in conformity with the provisions of the following directive 2014/35/UE (Low Voltage Directive)

including all applicable amendments:

Applied rules and standards: EN 13155, EN 62368

Plailly, June 12th, 2019 Joseph CARCOPINO, R&D Director

Page **2** / **16** L15

#### WARNINGS

#### **PRECAUTIONS**

Do not open the speaker, do not try to disassemble it neither to modify it in any way. The system doesn't include any user-repairable part.

If the system seems to be malfunctioning or damaged, stop using it at once and have it repaired by a NEXO qualified technician.

Do not expose the system directly to the sun or to the rain, do not immerse it into fluids, do not place objects filled with liquid on the system. If a liquid gets into the system, please have it inspected by a NEXO qualified technician.

When flying outdoor systems ensure that the system is not exposed to excessive wind or snow loads and is protected from rainfall.

In case of wind greater than 8 on Beaufort scale (72km/h – 45mph), a touring system has to be landed or an additional securing has to be implanted.

For fixed installations, wind loading has to be taken into account in accordance to the national standards

The connection should be performed by qualified technician, by ensuring that power is off.

Operating temperature with temperate climate: 0°C to +40°C (+32°F to +104); -20°C à +60°C (-4°F to +140°F) for storage.

#### **SAFETY INFORMATIONS**

Read this manual before using the speaker.

Keep this manual available for further reference.

Observe all warnings and cautions.

Please check the NEXO Web site nexo-sa.com to get the most up-to-date version of this manual.

Ensure you are aware of the safety rules applying to rigging, stacking or installing on tripod or speaker stand. Failure to observe these rules may expose persons to potential wounds or even death.

Only use the system with accessories specified by NEXO.

Please always consult a NEXO-accredited technician if the installation needs architectural works and observe following precautions:

#### Mounting Precautions:

- Please select screws and mounting location supporting 4 times the system weight.
- Do not expose the system to excessive dust, vibrations, to extreme cold or hot temperatures, to reduce the risk of damaging components.
- Do not place the system in an unstable position: it could fall accidentally.
- If the system is used on a tripod, please ensure the tripod's specifications are adapted and that its height does not exceed 1.40m/55". Do not move the tripod with the system in position.

#### **Connection and Powering Precautions:**

- Unplug connected cables before moving the system.
- Power off the system before connecting the system.
- When switching on the installation, the amplifier must be powered last; when switching the installation off, shut off the amplifier first.
- If you work by cold temperatures, progressively raise the level to nominal value during the first minutes of use, to allow the system components to stabilize.

Please check regularly the system condition.

#### **HIGH SOUND PRESSURE LEVELS**

Exposure to very high sound pressure levels may cause permanent hearing losses. Degrees of hearing losses may be different from one person to another, but almost everybody will be affected if exposed to high sound pressure levels during a long period of time. The OSHA (Occupational Safety and Health Administration) American Agency specified the following maximal exposures:

Number of Hours	Sound Pressure Level (dBA), Slow Response
8	90
6	92
4	95
3	97
2	100
1 ½	102
1	105
1/2	110
1/4 or less	115

#### WASTE OF ELECTRIC OR ELECTRONIC EQUIPMENT


L15



This symbol on the product or its packaging indicates that this product must not be treated as household waste. Instead, it is your responsibility to hand it over to a designated collection point for the recycling of waste electrical and electronic equipment. By ensuring your waste equipment is recycled, you will help prevent potential negative consequences for the environment and human health, which could appear if this product was not recycled. Recycling helps spare natural resources. For more information about the recycling of this product, please contact your local city office, your household waste disposal service or your reseller.

## **EQUIPMENT**

## 3 locations for rigging accessories, 1 on the top for speaker stand and one per side.

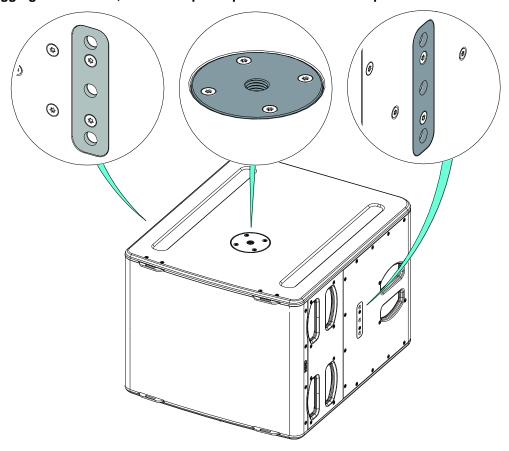

#### Assembly with pole stand or speaker stand

Fix the pole stand on the connector plate (M20) of the Sub. Mount the main cabinet on the pole stand / speaker stand (diameter of 35mm),


#### **IMPORTANT**

Speaker stand must be rated for the weight of the main cabinet. Speaker stand must always be installed on a horizontal surface.

Stand height and footprint must be defined to prevent assembly from collapsing.

Ensure that audience is not allowed within a safety area which radius is equal or higher than assembly height.


Test steadiness of the assembly by pushing in all directions.

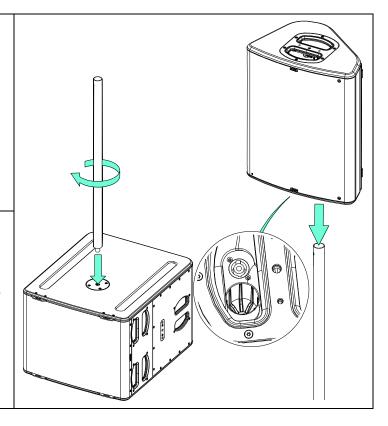

Page 4 / 16 L15

## **DESCRIPTION**

- The L15 is a compact and powerful subwoofer, ideally complementing P8/10/12 speakers.
- → Versions:
  - L15: black
  - L15-PW: white
- → The L15 subwoofer is equipped with two Speakon NL4 connectors, with parallel-wired pins,
- → L15 uses the 1+/1- pins, (2+/2- through).

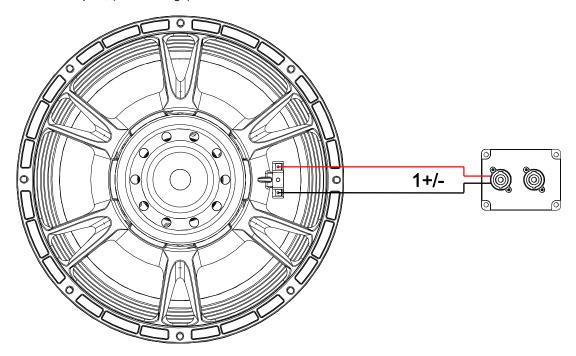

#### → Amplification

- The L15 subwoofer must be used with a NEXO processor to handle EQ, phase alignment, crossover and excursion/thermal protection for the system loudspeaker.
- The following table shows the number of P8/1012 speakers and L15 subwoofers usable with each solution.

	DTD + DTDAMP4X1.3	NXAMP4X1mk2	NXAMP4X2mk2	NXAMP4X4mk2
P8	Up to 2 per channel	Up to 2 per channel	Up to 4 per channel	Up to 4 per channel
P10	Up to 2 per channel	1 per channel	Up to 4 per channel	Up to 4 per channel
L15	1 per channel	1 per channel	Up to 2 per channel	Up to 2 per channel

	NXAMP4X1mk2 (BRIDGED)	NXAMP4X2mk2	NXAMP4X4mk2
P12	Up to 2 per channel	Up to 2 per channel	Up to 4 per channel
L15	1 per channel	Up to 2 per channel	Up to 2 per channel


L15

## **PRESET**


Please consult <u>nexo-sa.com</u> for NEXO TD Controllers firmware information.


There are two setting range for surrounding speaker L15:


- → "OMNI" Setups; For a traditional use of the subwoofer in omnidirectional radiation (require at least one subwoofer and a channel of amplifier).
  - Omnidirectional Main setup, with low-pass at 85 or 120 Hz.
  - Omnidirectional Monitor setup, with low-pass at 85 or 120 Hz.
- → "CARDIO" Setups; For a directional use (cardioid) of subwoofers (require at least two subwoofers and two channels of amplifier).
  - Cardioid back and front setups, with low-pass at 85 or 120 Hz.
    - Setup « FR » (Front) for the subwoofer pointed at the audience.
    - Setup « BA » (Back) for the subwoofer turned around.
  - The ideal ratio for a directional use is 2x L15 in CARDIO FRONT mode on top of 1x Reversed L15 in CARDIO BACK mode. From 1:1 to 3:1 ratio can be used.

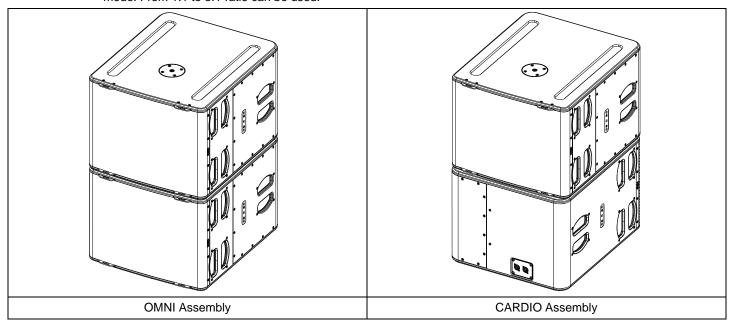

# With P8/10/12 in stage monitor

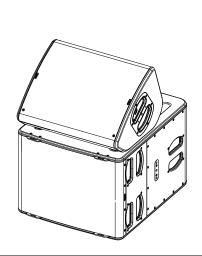


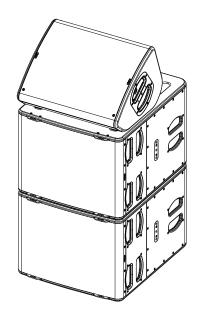


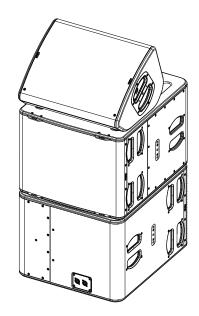


Stage monitor applications with Subs (OMNI or CARDIO modes)

# With P8/10/12 in front of house

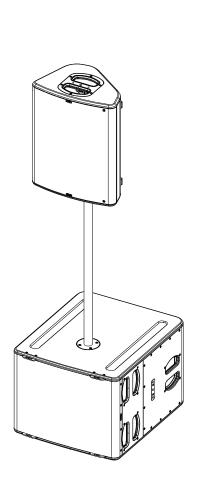

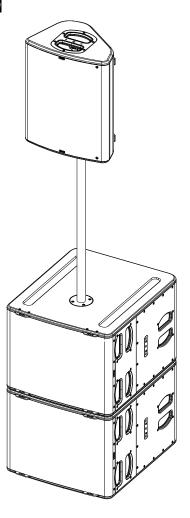

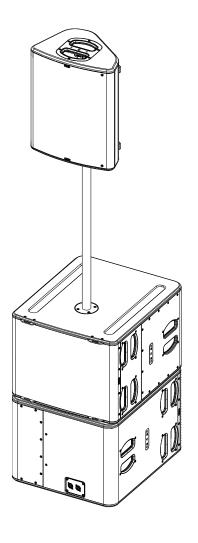

Front of house applications with Subs (OMNI or CARDIO modes)

L15 Page **7** / **16** 

#### **ACCESSORIES**

#### **WARNINGS**

All L15 accessories are specifically rated in agreement with structural computations.


Never use other accessories – including push-pins – when assembling L15 cabinets than the ones provided by NEXO: NEXO will decline responsibility over the entire L15 accessory range if any component is purchased from different supplier.


All L15 accessories have been designed so that cabinet are arrayed vertically.

PROHIBITED: L15 below L15 or P8/10/12 below L15 without dedicated accessory

#### LNU-HBRK15 (LNT-HBRK15)

Horizontal Cradle, use with L15, CLADAPT.

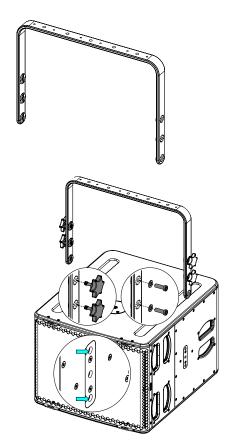

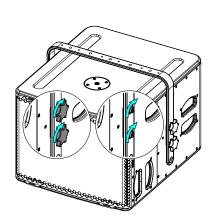


Place HBRK15 on L15, use only fasteners provided.

Tight properly.

Refer to the Product Data Sheet.


#### VNI-CLADAPT (PNI-CLADAPT)

 
Ceiling adapter, use with LNU-HBRK15.



Place the assembly on CLADAPT, use the 2 guides. Tight with the fasteners provided with CLADAPT.

Refer to the Product Data Sheet.

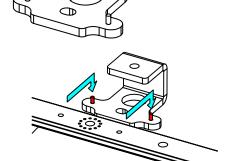

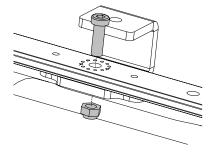



Page 8 / 16 L15

## **LNI-3L15**

L15 Rigging system (up to 3; Cardio or Omni)

Refer to the Product Data Sheet.

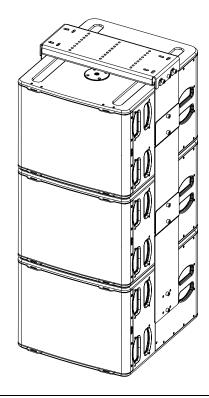


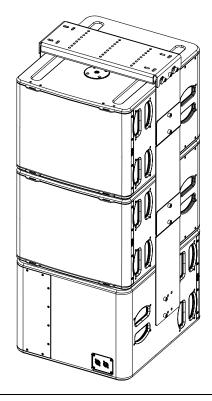

## VNI-CPL01

Coupling Bar for 2 or 3 L15


Refer to the Product Data Sheet.

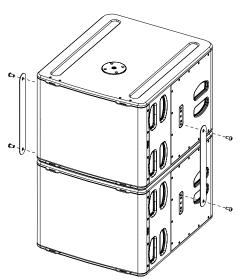

## LNT-WB15

Wheelboard

Refer to the Product Data Sheet.

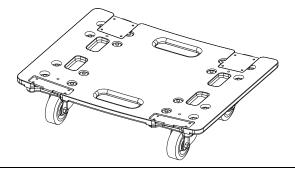

L15


LNT-COV15: COVER FOR L15 ON WHEELBOARD

**LNT-2CASE15: FLIGHT CASE FOR 2X L15** 

Page **9** / **16** 

# **ARRAY EQ**


The ArrayEQ allows to adjust the system frequency response in its lower range (see curves below, with different ArrayEq values):

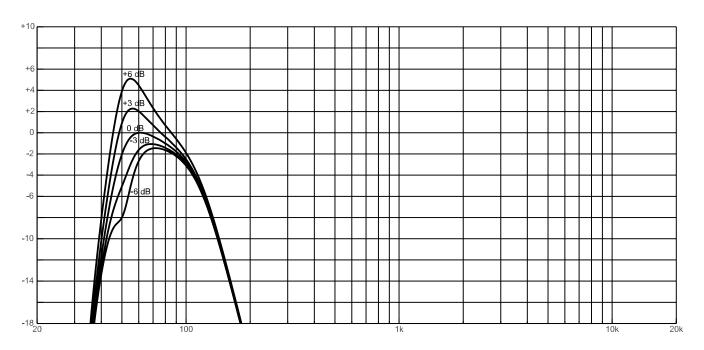

# **MAINTENANCE**


# **Grille Changing:**

Remove 8 screws, tightening torque: 3.5 Nm (Thread Locker: Loctite 242)

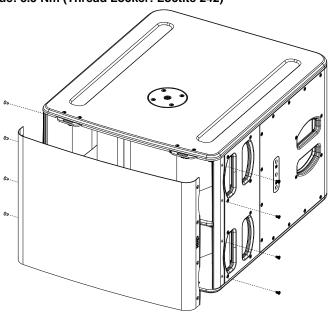


## 15" Driver


Remove 20 screws

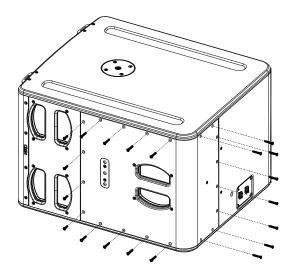

Remove 8 screws.

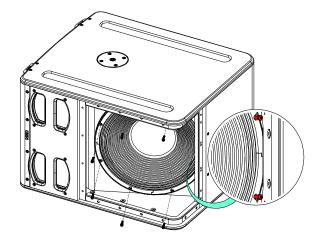


Remove the trap

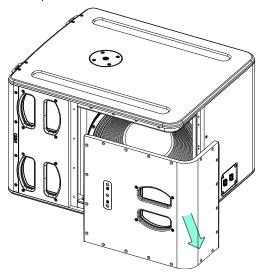

Remove the driver.

L15

Tightening torque: 3.5 Nm (Thread Locker: Loctite 242)

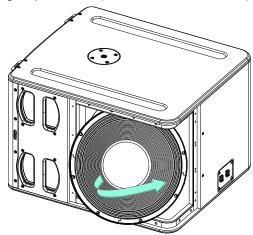


Page **11** / **16** 


#### **MAINTENANCE**

Place 8 screws.


Tightening torque: 3.0 Nm (Thread Locker: Loctite 242)

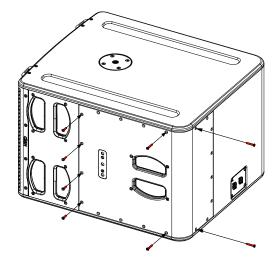


Follow the sequence below to tight the screw.Place and tight the 12 others screws.

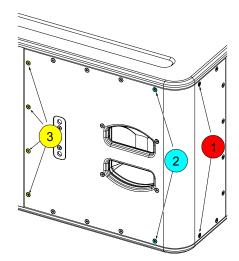

# **Spare parts**

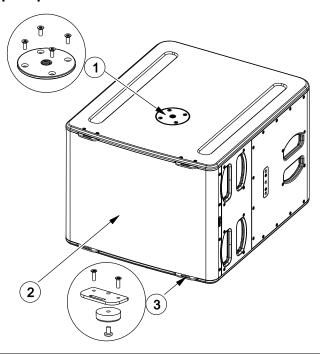

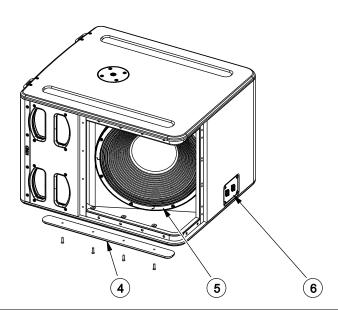

MARK	QUANTITY	REFERENCE	DESIGNATION	
1	1	05DOUILM20N	Connector Plate M20 Black (with fasteners)	
	1	05DOUILM20W	Connector Plate M20 White (with fasteners)	
2	1	05L15UA	Complete grille Black (with fasteners)	
	1	05L15UA-PW	Complete grille White (with fasteners)	
3	4	05AMPLAVER02	Wheelboard attachment Black (with fasteners)	
	4	05AMPLAVER02-PW	Wheelboard attachment White (with fasteners)	
4	2	05PATIN01	Rubber Skid Black (with fasteners)	
	2	05PATIN01-PW	Rubber Skid White (with fasteners)	
5	1	05HPB15-4	15" Driver (with fasteners)	
	1	05HPB15-4R/K	Recone kit (with fasteners)	
6	1	05CNX01	Connection plate Black without lexan (with fasteners)	
	1	05CNX01-PW	Connection plate White without lexan (with fasteners)	
6a	1	05LEXCNX-L15	Lexan CNX L15 Black	
	1	05LEXCNX-L15PW	Lexan CNX L15 White	
6b	2	05CNXNL4MDV-1	Speakon NL4 MDV1	

# TECHNICAL SPECIFICATIONS

# **L15 WITH NEXO ELECTRONICS**

Model	L15
Frequency range (±6dB)	40Hz – 120Hz
Peak SPL Level (1m)	139 dB Peak
Operating voltage	55Vrms (150Vpeak)
Crossover Frequency	85Hz; 120Hz
Nominal Impedance	4Ω

## **SPECIFICATIONS**

Model	L15	
Components	1x 15" – 4 ohms – Long excursion – Neodymium driver	
Material	Custom made bent plywood of Baltic birch and poplar	
Finish	Black or white structural paint	
Front finish	Steel front grille	
Fittings	Handles on each side Threated inserts on each side for connection of mounting accessories Stand fitting M20	
Connector	2x NL4, 4 poles connectors	
Weight	35 kg / 77 lb	
Dimensions	[17,3] [17,1] [21,7] [25,6] [25,6] [650] [0,8] $\phi$ 20	

L15

Page **13** / **16** 

# **USER NOTES**

