
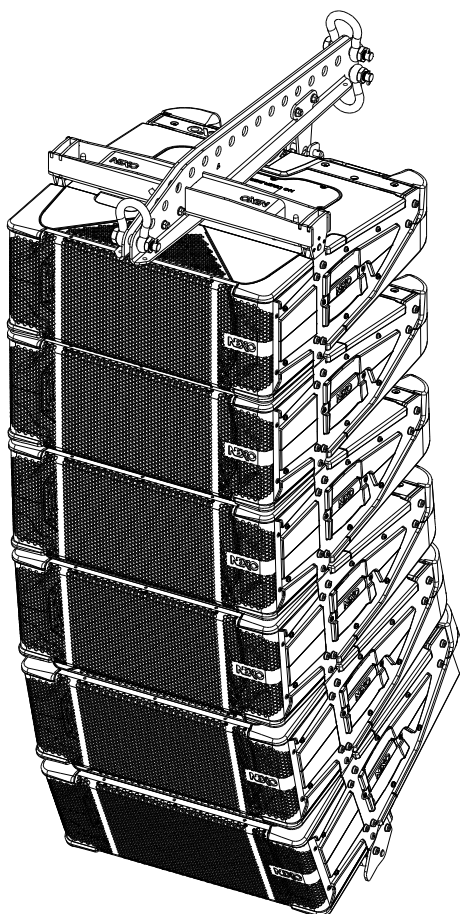
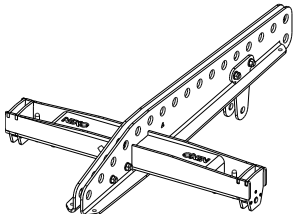


Single Bumper M28 (Max: 6x M28)

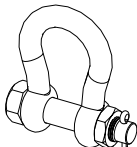

Contents:

<p style="text-align: center;">X1</p> 	<p style="text-align: center;">X3</p> 
--	--

Only use the provided Shackles (Alloy Bolt Type shackles 3.25 Tons)

Weight: 17 kg / 38 lb




nexo-sa.com

ZA du Pre de la Dame Jeanne
60128 PLAILLY - France

- Read this document before using.
- Keep this document.
- Observe all warnings and cautions.



Dimensions:

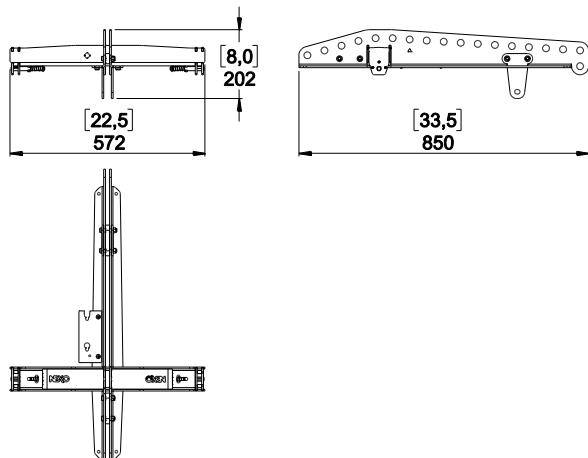


Use:

Use NEXO Simulation Software for mechanical prediction.

Rigging 1 Point: use Nexo Simulation Software. Mark ▲ (CG) corresponds to the center of gravity.

Rigging 2 Points: Use the external holes.

CP: Rigging point for the compression mode.

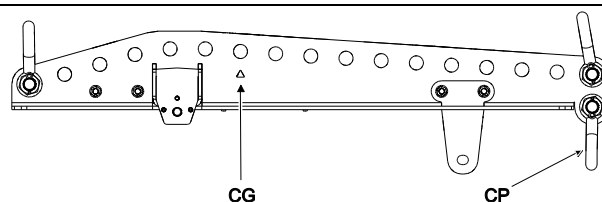


Assembly of LBUMPM28

Insert LBUMPM28 into the 3 fixing points : 2 on the sides and one at the back of M28.

Lock the lateral springs pins inside the LBUMPM28.


Insert the quick release pin at the back.

Lift the assembly.

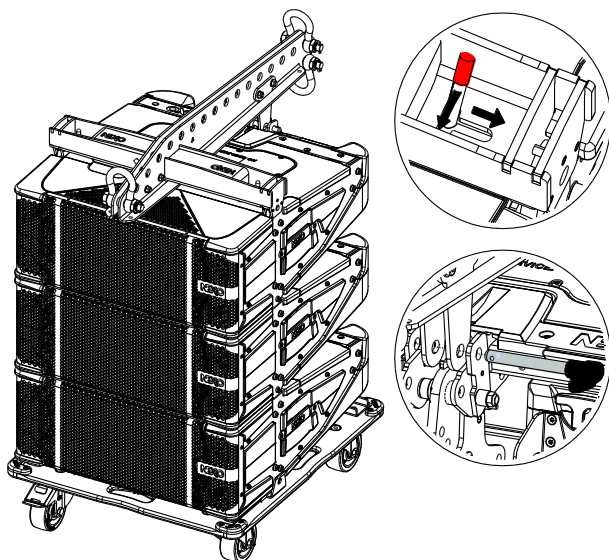

Align module or second dolly package below upper assembly.

Connect upper assembly to the second set of cabinets by pushing RedLock™ and insert the quick release pin at the back.

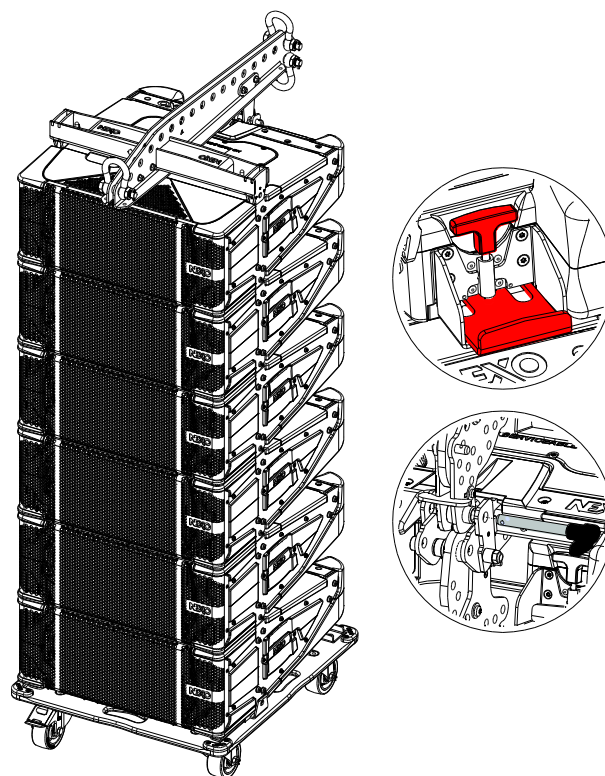

Side locking pins of LBUMPM28 must be flush to rigging plates on both sides of the cabinet.

Ensure all RedLock™ safety pins are locked into handle holes.

Check rear quick release pins are fully engaged and locked.

NEXO

nexo-sa.com


ZA du Pre de la Dame Jeanne
60128 PLAILLY - France

- Read this document before using.
- Keep this document.
- Observe all warnings and cautions.



Assembly of BTBUMPER


- Align BTBUMPER to bottom cabinet side rigging slots and lock it to M28 by pushing RedLock™.
- Release the Compass to align both rigging points and insert the quick release pin.
- Pull up towards BTBUMPER and insert the quick release pin into BTBUMP hole.

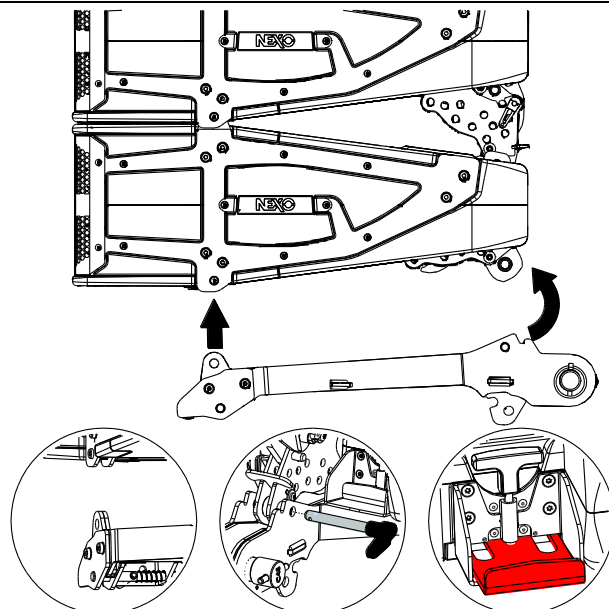

Ensure all RedLock™ safety pins are locked into handle holes.

Check rear quick release pins are fully engaged and locked.

Rigging mode

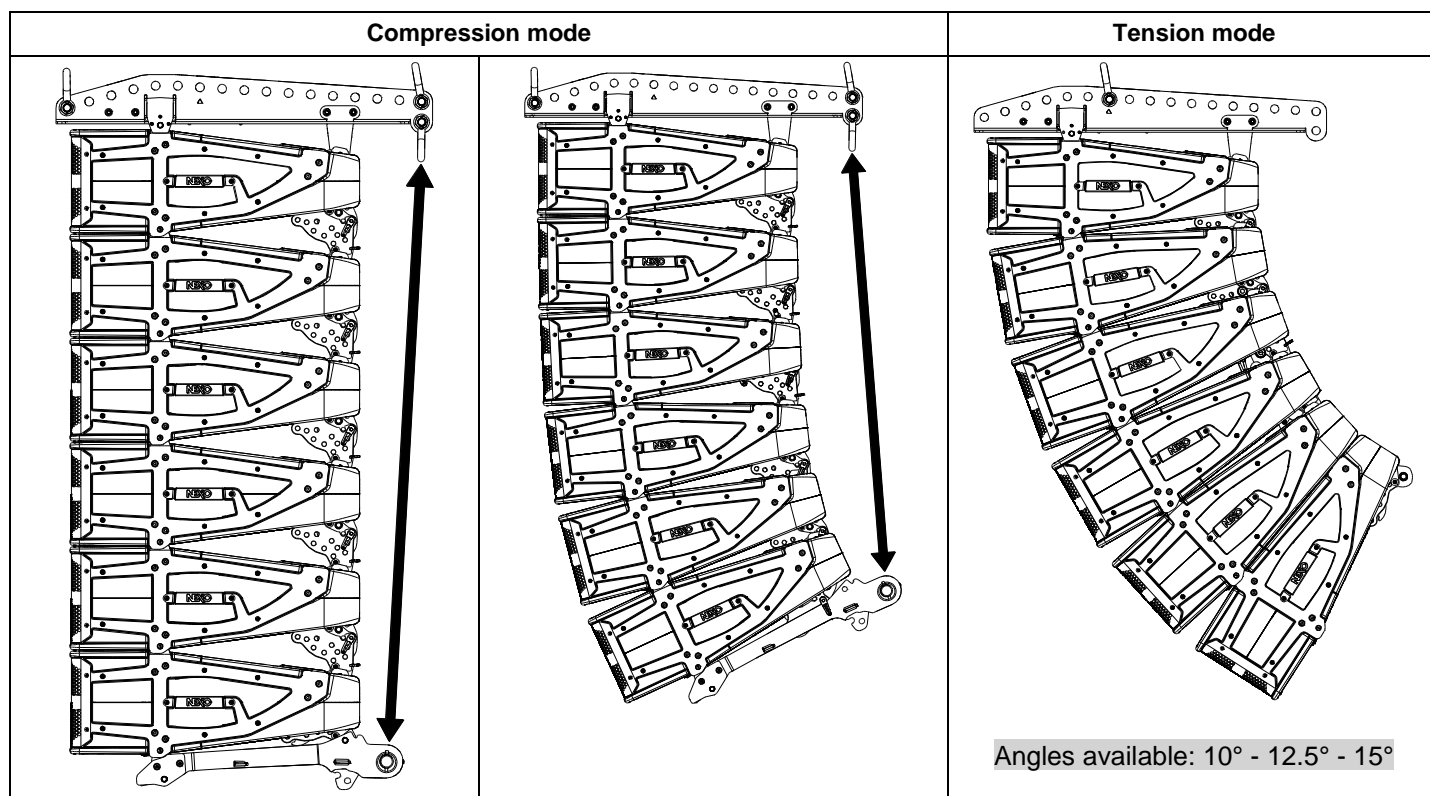

- NEXO cannot accept responsibility for accidents caused by any factor other than defects in this product itself.
- Please check the web site nexo-sa.com for the latest update.

NEXO

nexo-sa.com

ZA du Pre de la Dame Jeanne
60128 PLAILLY - France

- Read this document before using.
- Keep this document.
- Observe all warnings and cautions.

