


L18

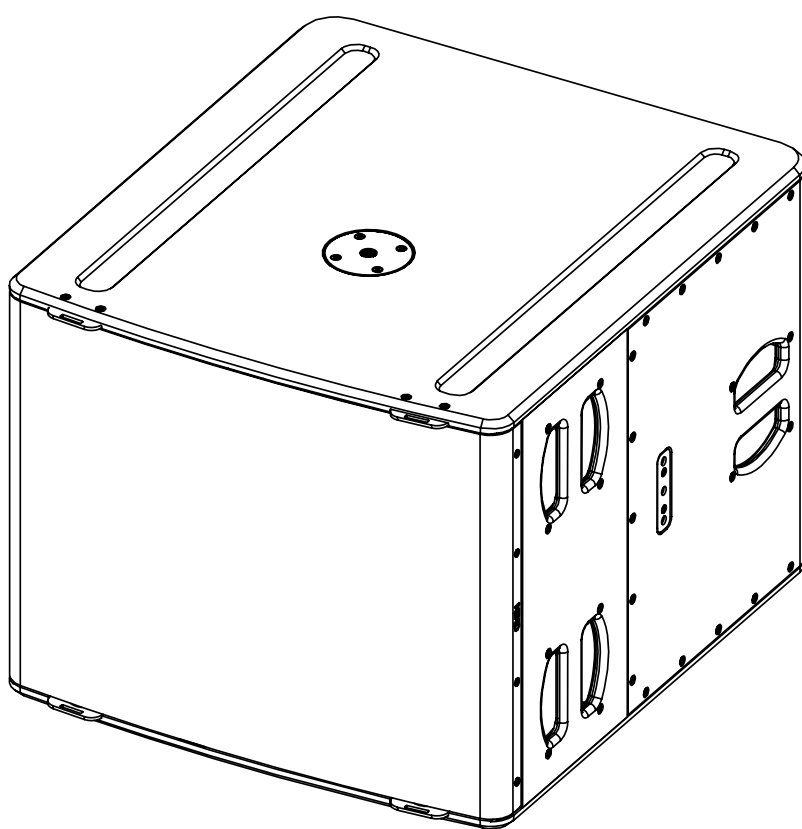

User manual



TABLE OF CONTENTS

TABLE OF CONTENTS	2
WARNINGS	3
EQUIPMENT	4
DESCRIPTION	5
PRESET	6
ACCESSORIES	8
ARRAY EQ	9
MAINTENANCE	10
TECHNICAL SPECIFICATIONS	12
USER NOTES	13

EU Conformity declaration

We, **NEXO SA**
ZA DU PRE DE LA DAME JEANNE
60128 PLAILLY – France

Declare under our sole responsibility that the product **Loudspeaker**
 Type **L18**

Serial number **On the product**

Is in conformity with the provisions of the following directive **2014/35/UE (Low Voltage Directive)**
 including all applicable amendments:

Applied rules and standards: **EN 13155, EN 62368**
 Plailly, December, 2020 **Joseph CARCOPINO, R&D Director**



WARNINGS

PRECAUTIONS

Do not open the speaker, do not try to disassemble it neither to modify it in any way. The system doesn't include any user-repairable part.

If the system seems to be malfunctioning or damaged, stop using it at once and have it repaired by a NEXO qualified technician.

Do not expose the system directly to the sun or to the rain, do not immerse it into fluids, do not place objects filled with liquid on the system. If a liquid gets into the system, please have it inspected by a NEXO qualified technician.

The connection should be performed by qualified technician, by ensuring that power is off.

Operating temperature with temperate climate: 0°C to +40°C (+32°F to +104°); -20°C à +60°C (-4°F to +140°F) for storage.

SAFETY INFORMATION

Read this manual before using the speaker.

Keep this manual available for further reference.

Observe all warnings and cautions.

Please check the NEXO Web site nexo-sa.com to get the most up-to-date version of this manual.

Ensure you are aware of the safety rules applying to rigging, stacking or installing on tripod or speaker stand. Failure to observe these rules may expose persons to potential wounds or even death.

Only use the system with accessories specified by NEXO.

Please always consult a NEXO-accredited technician if the installation needs architectural works and observe following precautions:

Mounting Precautions:

- Please select screws and mounting location supporting 4 times the system weight.
- Do not expose the system to excessive dust, vibrations, to extreme cold or hot temperatures, to reduce the risk of damaging components.
- Do not place the system in an unstable position: it could fall accidentally.
- If the system is used on a tripod, please ensure the tripod's specifications are adapted and that its height does not exceed 1.40m/55". Do not move the tripod with the system in position.

Connection and Powering Precautions:

- Unplug connected cables before moving the system.
- Power off the system before connecting the system.
- When switching on the installation, the amplifier must be powered last; when switching the installation off, shut off the amplifier first.
- If you work by cold temperatures, progressively raise the level to nominal value during the first minutes of use, to allow the system components to stabilize.

Please check regularly the system condition.

HIGH SOUND PRESSURE LEVELS

Exposure to very high sound pressure levels may cause permanent hearing losses. Degrees of hearing losses may be different from one person to another, but almost everybody will be affected if exposed to high sound pressure levels during a long period of time. The OSHA (Occupational Safety and Health Administration) American Agency specified the following maximal exposures:

Number of Hours	Sound Pressure Level (dBA), Slow Response
8	90
6	92
4	95
3	97
2	100
1 ½	102
1	105
½	110
¼ or less	115


WASTE OF ELECTRIC OR ELECTRONIC EQUIPMENT



This symbol on the product or its packaging indicates that this product must not be treated as household waste. Instead, it is your responsibility to hand it over to a designated collection point for the recycling of waste electrical and electronic equipment. By ensuring your waste equipment is recycled, you will help prevent potential negative consequences for the environment and human health, which could appear if this product was not recycled. Recycling helps spare natural resources. For more information about the recycling of this product, please contact your local city office, your household waste disposal service or your reseller.

EQUIPMENT

3 locations for hanging, 1 on the top for speaker stand and on both side.

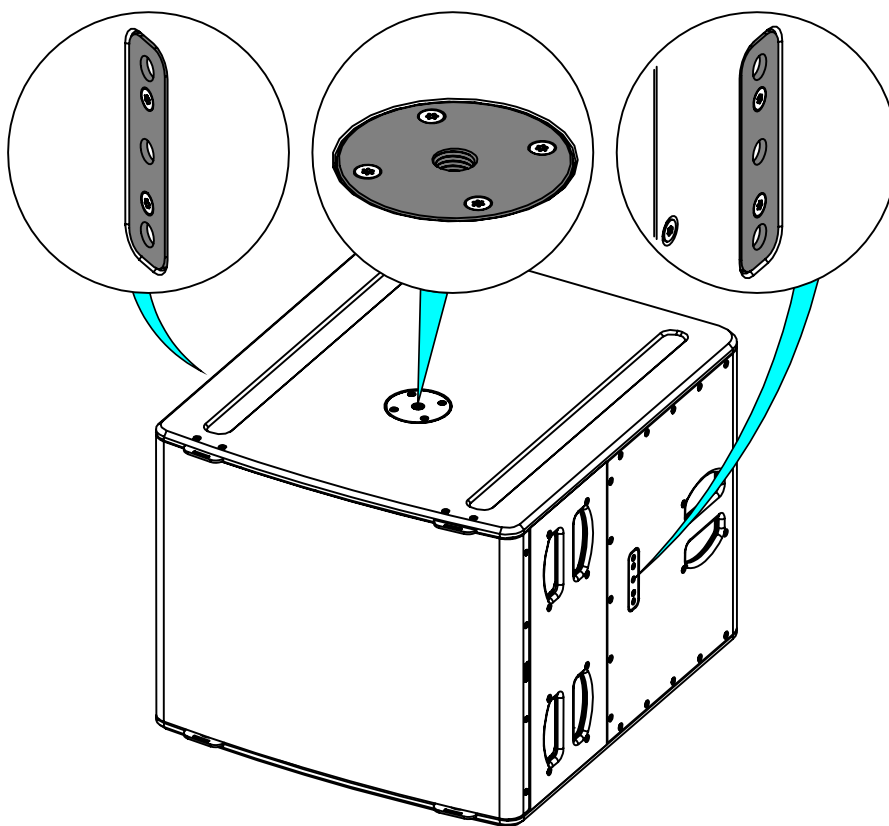


Assembly on distance rod or speaker stand

Place distance rod on the connector plate (M20) of the Sub.
Place the main cabinet on the distance rod / monitor stand
(diameter of 35mm),


IMPORTANT

Speaker stand must be rated for the weight of the main cabinet.
Speaker stand must always be installed on a horizontal surface.
Stand height and footprint must be defined to prevent assembly from collapsing.
Ensure that audience is not allowed within a safety area which radius is equal or higher than assembly height.
Test steadiness of the assembly by pushing in all directions.

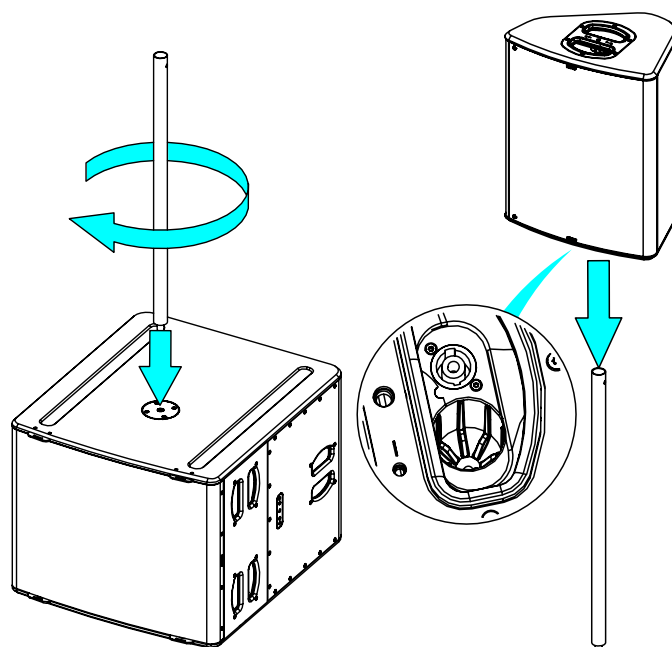

DESCRIPTION

- The L18 is a compact and powerful subwoofer, ideally complementing PLUS serie speakers
- The L18 subwoofer is equipped with two Speakon NL4 connectors, with parallel-wired pins,
- L18 uses the 1+/- pins, (2+/- through).

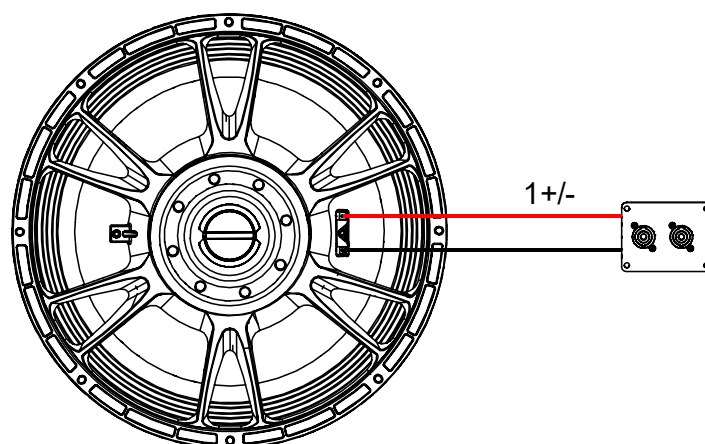

→ Amplification

- The L18 subwoofer must be used with a NEXO processor to handle EQ, phase alignment, crossover and excursion/thermal protection for the system loudspeaker.
- The following table shows the number of L18 subwoofers usable with each solution.

	DTD + DTDAMP4X1.3	NXAMP4X1mk2	NXAMP4X2mk2	NXAMP4X4mk2
P8	Up to 2 per channel	Up to 2 per channel	Up to 4 per channel	Up to 4 per channel
P10	Up to 2 per channel	1 per channel	Up to 4 per channel	Up to 4 per channel
P12	**	Up to 2 per channel (a)	Up to 2 per channel	Up to 4 per channel
L18	**	1 per channel (a)	1 per channel	Up to 2 per channel

(a) NXAMP4X1mk2 (BRIDGED)


	NXAMP4X1mk2 (BRIDGED)	NXAMP4X2mk2	NXAMP4X4mk2
P15	Up to 2 per channel	Up to 2 per channel	Up to 4 per channel
L18	1 per channel	1 per channel	Up to 2 per channel


PRESET

Please consult nexo-sa.com for NEXO TD Controllers firmware information.


There are two setting range for surrounding speaker L18:

- “OMNI” Setups; For a traditional use of the subwoofer in omnidirectional radiation (require at least one subwoofer and a channel of amplifier).
 - Omnidirectional Main setup, with low-pass at 60, 85 or 120 Hz.
 - Omnidirectional Monitor setup, with low-pass at 60, 85 or 120 Hz.
- “CARDIO” Setups; For a directional use (cardioid) of subwoofers (require at least two subwoofers and two channels of amplifier).
 - Cardioid back and front setups, with low-pass at 60, 85 or 120 Hz.
 - Setup « FR » (Front) for the subwoofer pointed at the audience.
 - Setup « BA » (Back) for the subwoofer turned around.
 - The ideal ratio for a directional use is 2x L18 in CARDIO FRONT mode on top of 1x Reversed L18 in CARDIO BACK mode. From 1:1 to 3:1 ratio can be used.

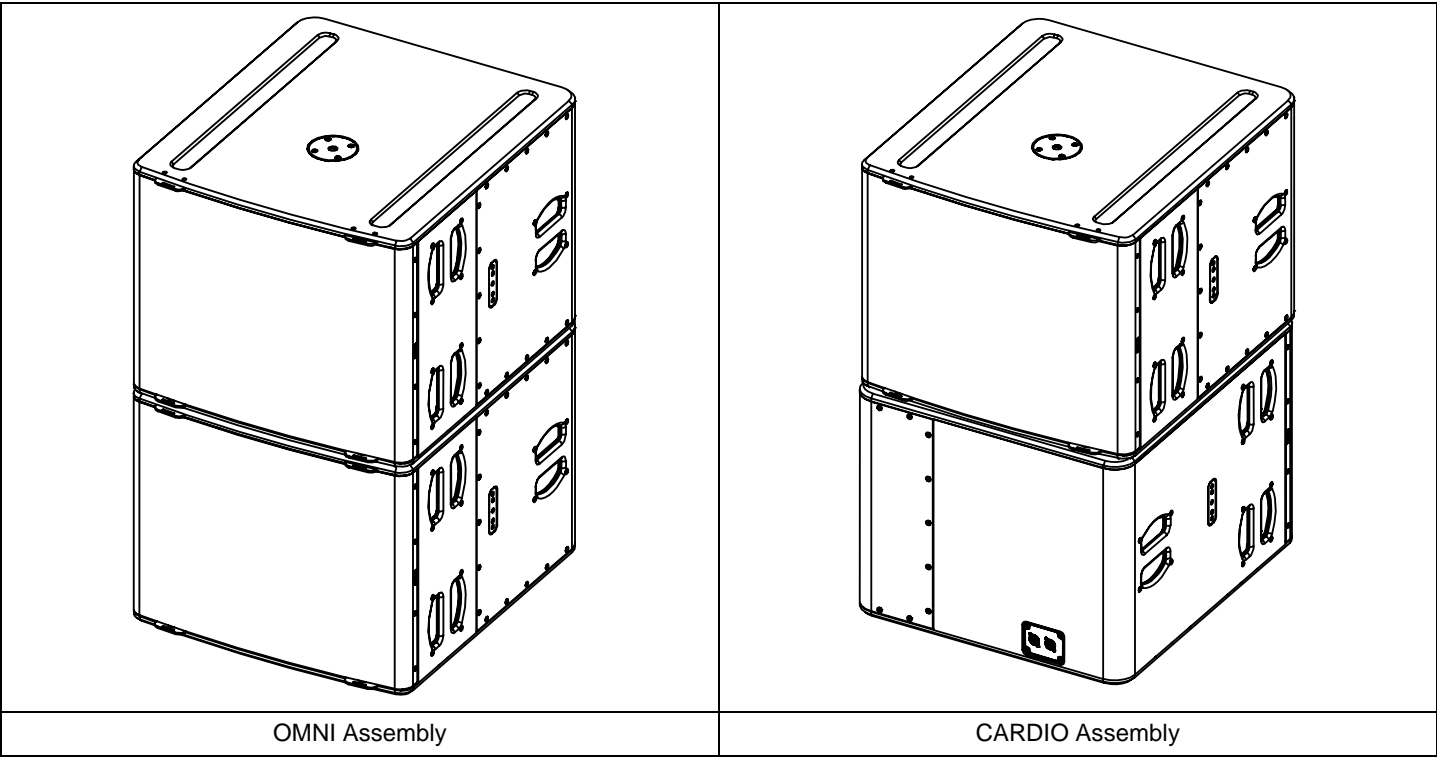

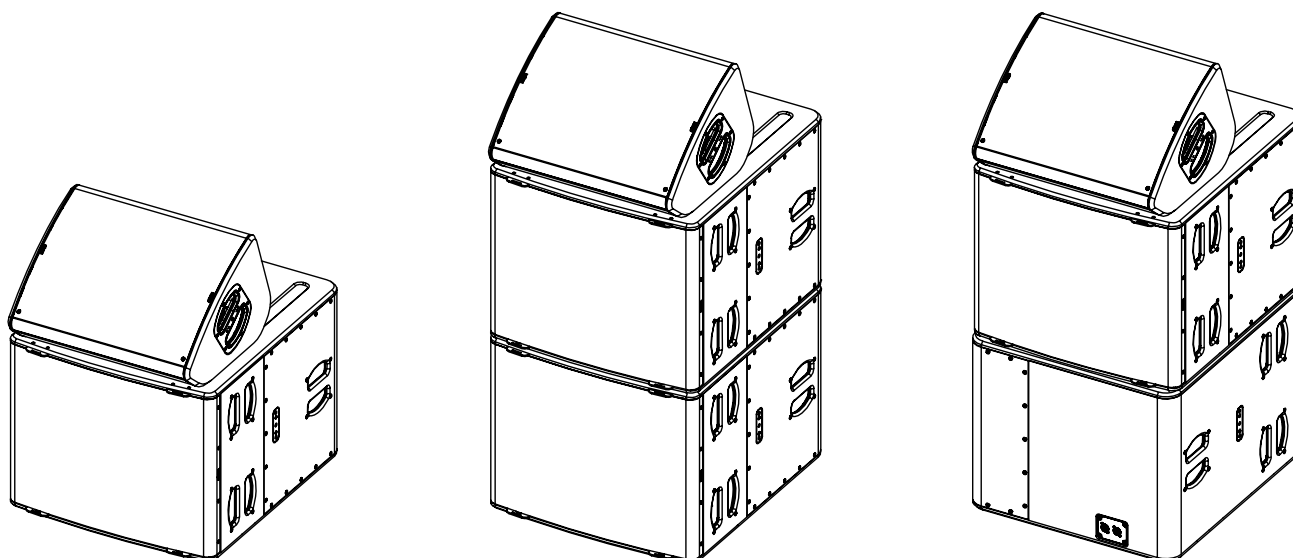With P15 in stage monitor

Stage monitor applications with Subs (OMNI or CARDIO modes)

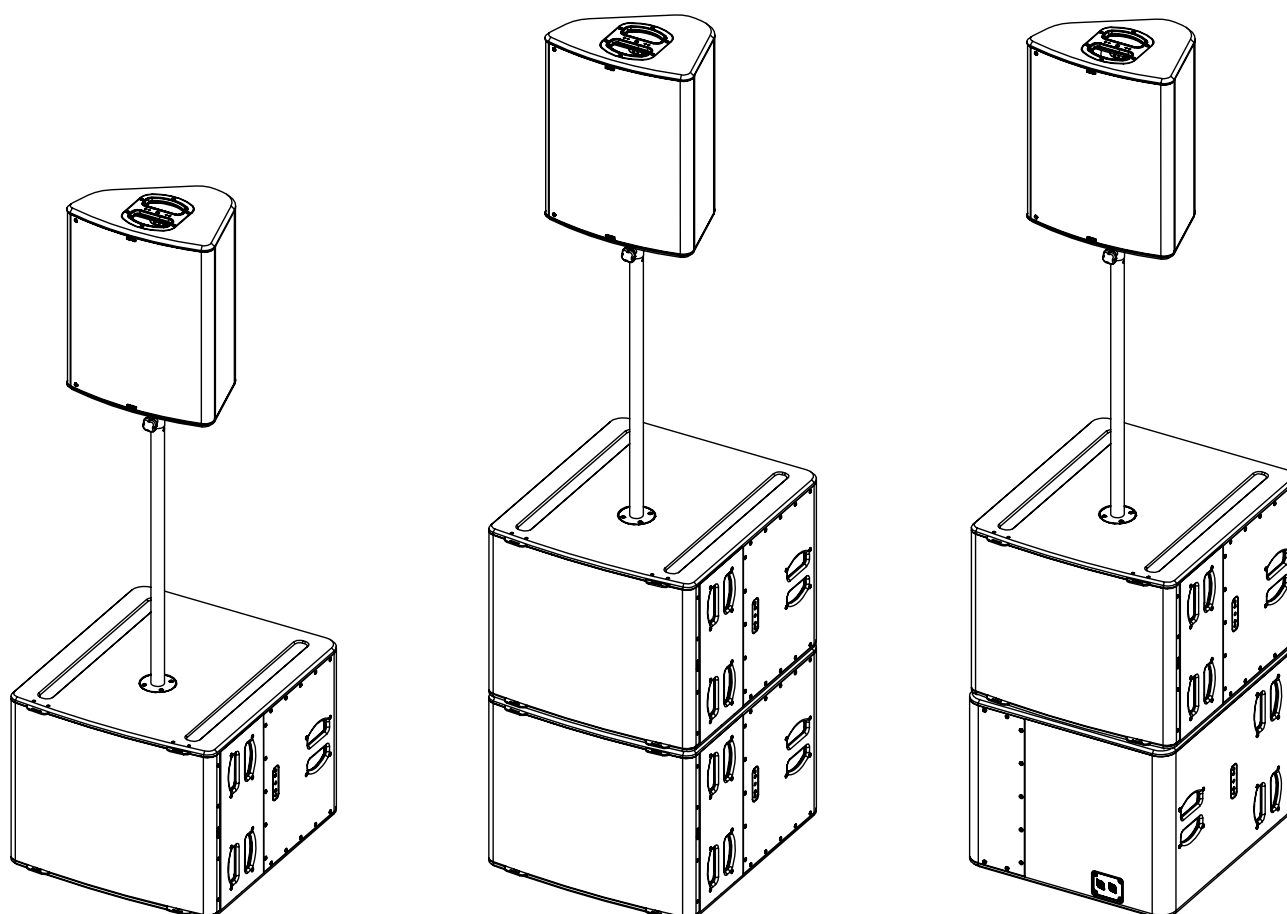With P15 in front of house


Front of house applications with Subs (OMNI or CARDIO modes)

ACCESSORIES


WARNINGS

All L18 accessories are specifically rated in agreement with structural computations.
Never use other accessories – including push-pins – when assembling L18 cabinets than the ones provided by NEXO: NEXO will decline responsibility over the entire L18 accessory range if any component is purchased from different supplier.
All L18 accessories have been designed so that cabinet are arrayed vertically.
PROHIBITED: L18 below L18 or PLUS serie below L18 without dedicated accessory


LNT-HBRK18

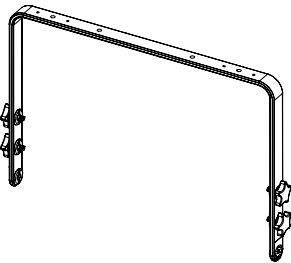Horizontal cradle, use with L18, CLADAPT	
------------------------------------------	-------------------------------------------------------------------------------------


PNI-CLADAPT

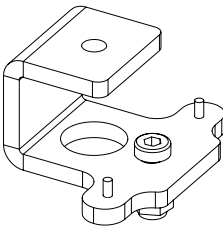Ceiling Adapter, use with HBRK18	
----------------------------------	--------------------------------------------------------------------------------------

LNI-3L18

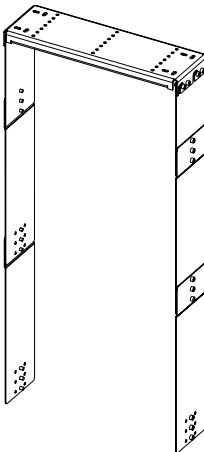L18 Rigging system (up to 3; Cardio or Omni)	
----------------------------------------------	---------------------------------------------------------------------------------------


LNT-WB18

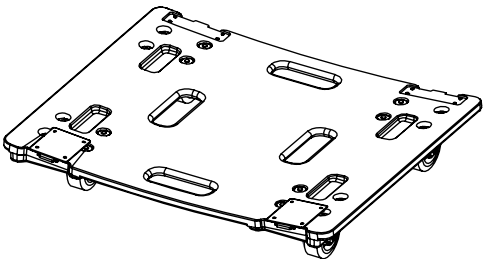Wheelboard	
------------	--------------------------------------------------------------------------------------

LNT-COV18: COVER FOR L18 ON WHEELBOARD


ARRAY EQ

The ArrayEQ allows to adjust the system frequency response in its lower range
(see curves below, with different ArrayEq values):

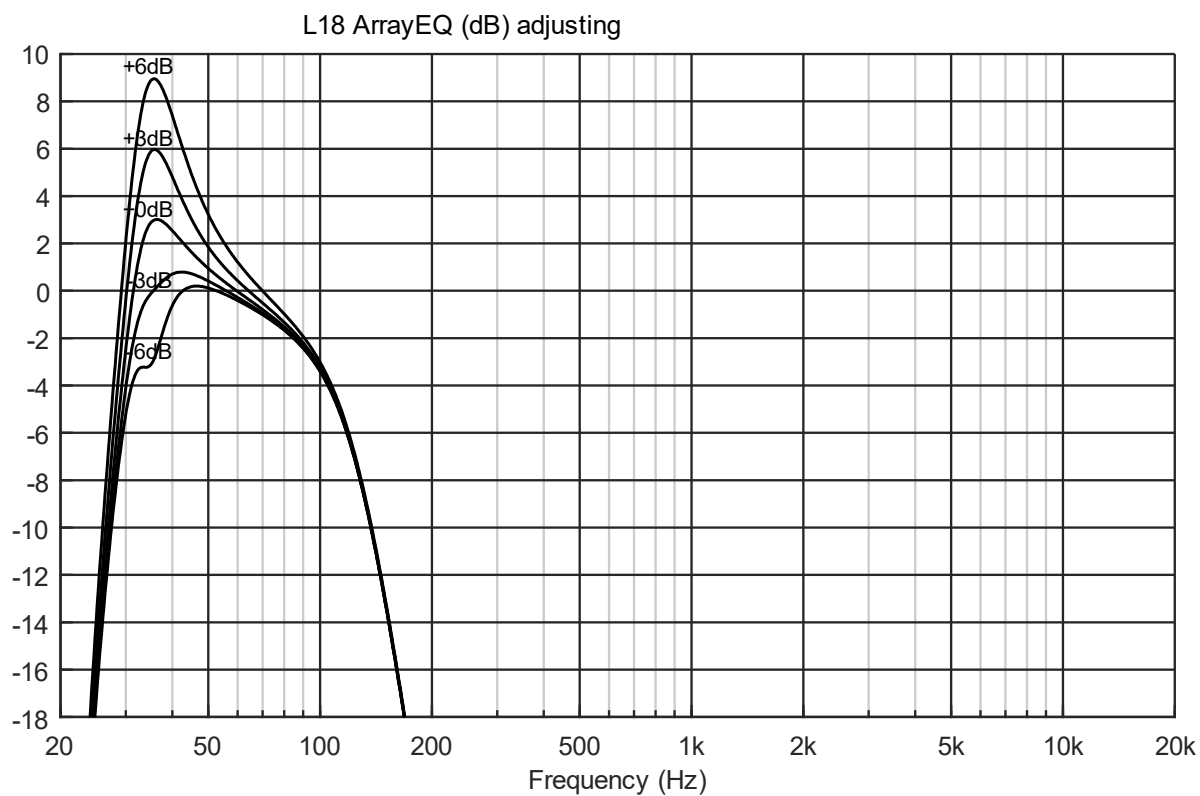



MAINTENANCE

Grille Changing: Remove 8 screws

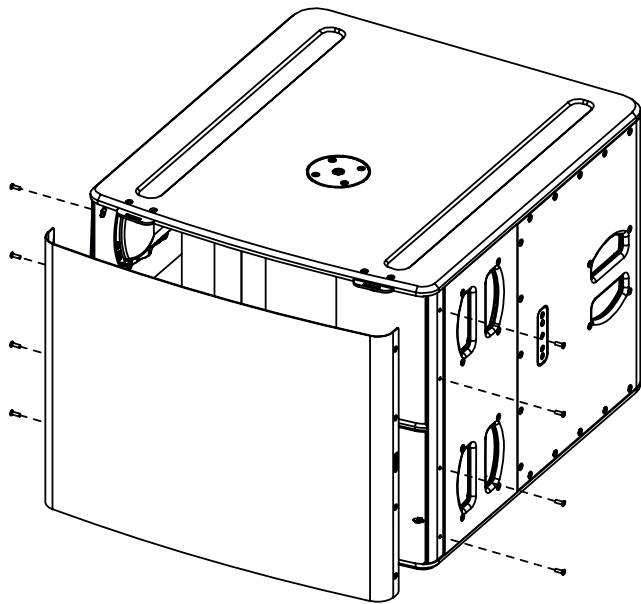


18'' Driver

<div>1</div> <div>Remove 20 screws</div>	<div>2</div> <div>Remove the trap</div>
A line drawing of the washing machine with its front panel removed. Twenty screws are shown being removed from the front panel, with dashed lines and arrows indicating their locations. The screws are distributed across the front panel, including the top, bottom, and sides.	A line drawing of the washing machine with its front panel removed. A blue arrow points to the trap, which is being removed from the bottom of the machine.
<div>3</div> <div>Remove 8 screws, 2 inside with a curved screwdriver.</div>	<div>4</div> <div>Remove the driver.</div>
A line drawing of the washing machine with its front panel removed. Eight screws are shown being removed from the front panel, with dashed lines and arrows indicating their locations. Two screws are located inside the front panel, and they are being removed with a curved screwdriver.	A line drawing of the washing machine with its front panel removed. A blue arrow points to the driver, which is being removed from the bottom of the machine.
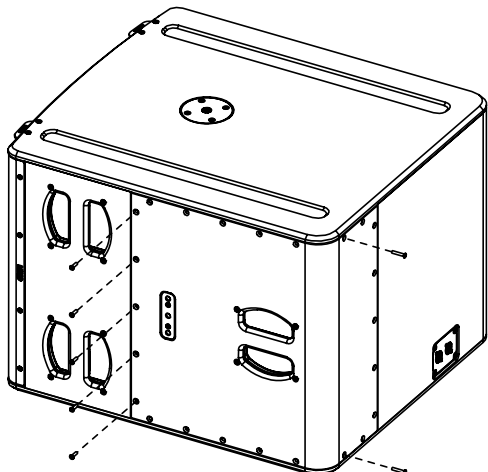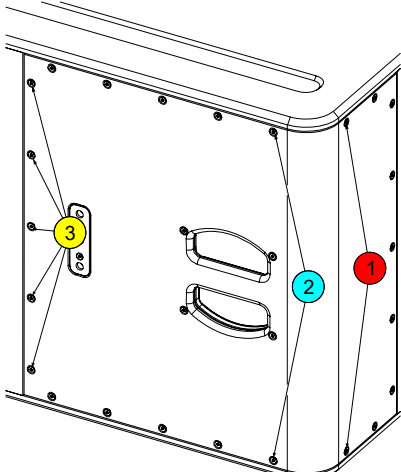
<p>5 Place 8 screws. Tightening torque: 3.0 Nm (Thread Locker: Loctite 242)</p> 	<p>6 Follow the sequence below to tight the screw.Place and tight the 12 others screws.</p> 
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Spare parts

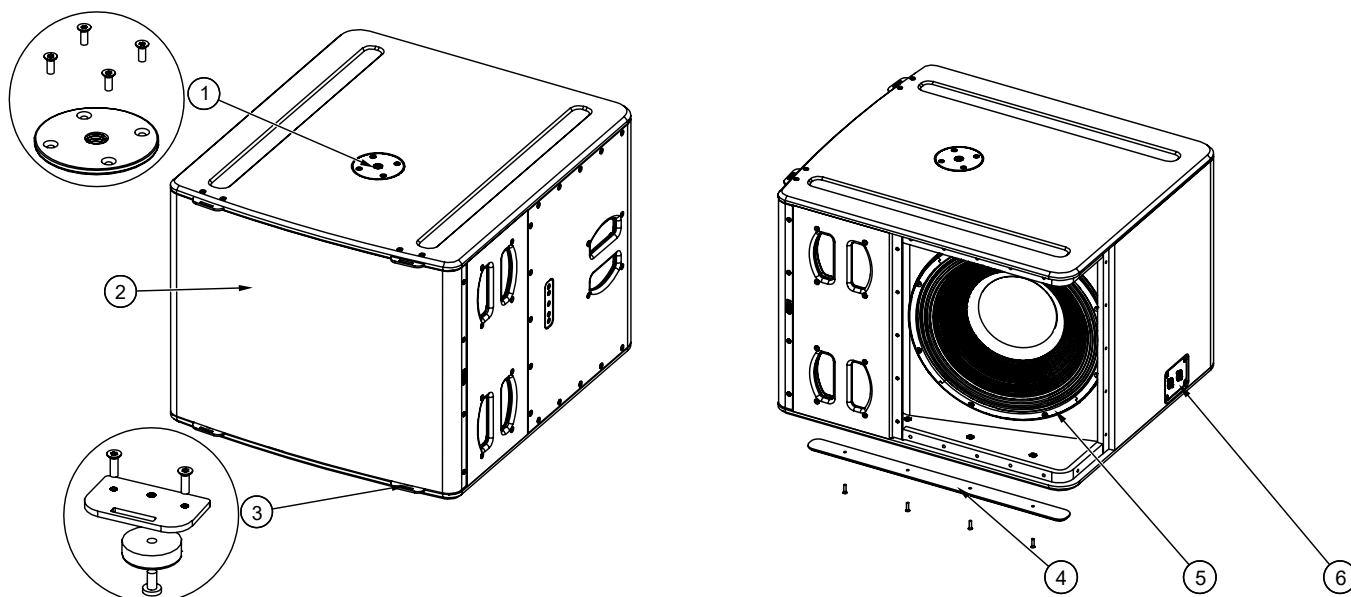

MARK	QUANTITY	REFERENCE	DESIGNATION
1	1	05DOUILM20N	Connector Plate M20 Black (with fasteners)
	1	05DOUILM20W	Connector Plate M20 White (with fasteners)
2	1	05L18UA	Complete grille Black (with fasteners)
	1	05L18UA-PW	Complete grille White (with fasteners)
3	4	05AMPLAVER02	Wheelboard attachment Black (with fasteners)
	4	05AMPLAVER02-PW	Wheelboard attachment White (with fasteners)
4	2	05PATIN01	Rubber Skid Black (with fasteners)
	2	05PATIN01-PW	Rubber Skid White (with fasteners)
5	1	05HP18DS115-4	18" Driver (with fasteners)
	1	05HP18DS115-4R/K	Recone kit (with fasteners)
6	1	05CNX02	Connection plate Black without lexan (with fasteners)
	1	05CNX02-PW	Connection plate White without lexan (with fasteners)
6a	1	05LEXCNX-L18	Lexan CNX L18 Black
	1	05LEXCNX-L18PW	Lexan CNX L18 White
6b	2	05CNXNL4MDV-1	Speakon NL4 MDV1

TECHNICAL SPECIFICATIONS


L18 WITH NEXO ELECTRONICS

Model	L18
Frequency range (±6dB)	32Hz – 120Hz
Peak SPL Level (1m)	140 dB Peak
Operating voltage	80Vrms (180Vpeak)
Crossover Frequency	60 Hz; 85Hz; 120Hz
Nominal Impedance	4Ω

SPECIFICATIONS

Model	L18
Components	1x 18” – 4 ohms – Long excursion – Neodymium driver
Material	Baltic birch / Poplar plywood
Finish	Black or white structural paint
Front finish	Steel front grille
Fittings	Handles on both sides Threated inserts on both sides for connection of mounting accessories Stand fitting M20
Connector	2x NL4, 4 poles connectors
Weight	50 kg / 110 lb

Dimensions

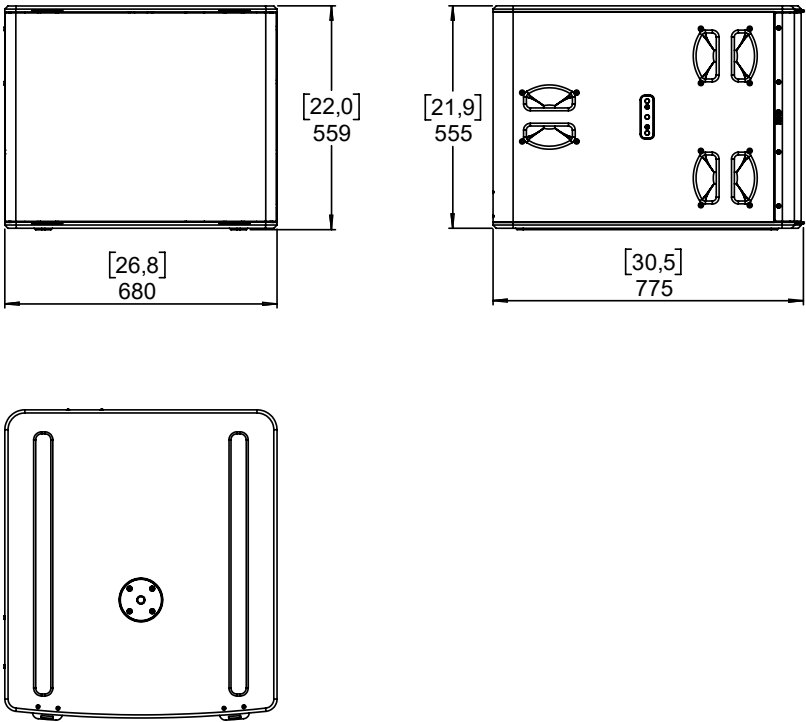

USER NOTES

NEXO S.A.

Parc d'activité de la Dame Jeanne
F-60128 PLAILLY

Tel: +33 3 44 99 00 70
Fax: +33 3 44 99 00 30
E-mail: info@nexo.fr

nexo-sa.com

NEXO