



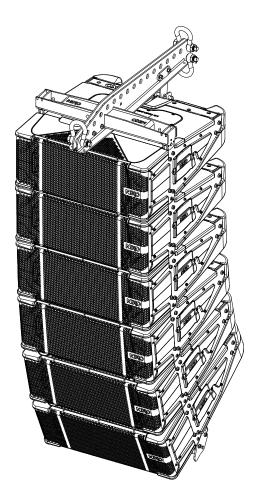

# Single bumper M28 (max 9x M28)



## **Contents:**

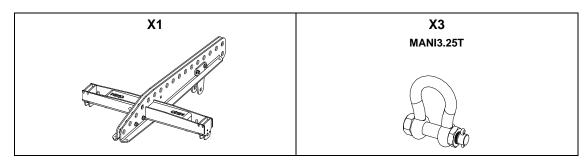

Only use the provided Shackles (Alloy Bolt Type shackles 3.25 Tons)

# Weight: 17 kg / 38 lb




- Read this document before using.
- Keep this document.


- Observe all warnings and cautions.



## **Dimensions:**

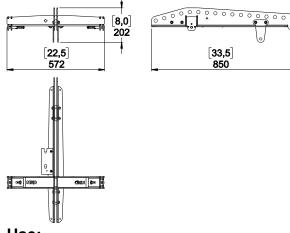

#### Use:



# Assembly of LBUMPM28

Insert LBUMPM28 into the 3 fixing points : 2 on the sides and one at the back of M28.


Lock the lateral springs pins inside the LBUMPM28.


Insert the quick release pin at the back.

Lift the assembly.

Align module or second dolly package below upper assembly.

Connect upper assembly to the second set of cabinets by pushing RedLock<sup>™</sup> and insert the quick release pin at the back.

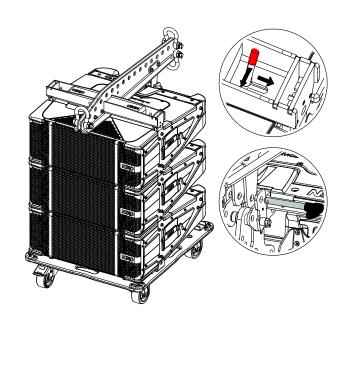

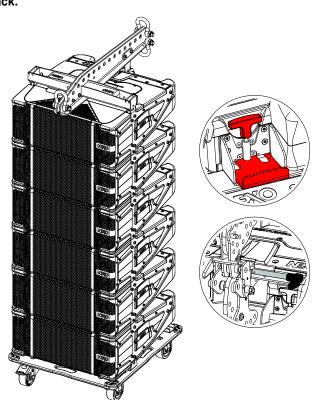


Side locking pins of LBUMPM28 must be flush to rigging plates on both sides of the cabinet. Ensure all RedLock<sup>™</sup> safety pins are locked into handle holes. Check rear quick release pins are fully engaged and locked.




- Read this document before using.
- Keep this document.
- Observe all warnings and cautions.



## Assembly of BTBUMPER




- Release the Compass to align both rigging points and insert the quick release pin.
- Pull up towards BTBUMPER and insert the quick release pin into BTBUMP hole.

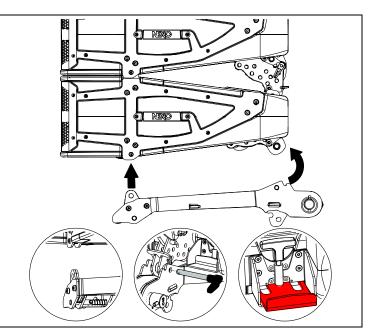

Ensure all RedLock<sup>™</sup> safety pins are locked into handle holes. Check rear quick release pins are fully engaged and locked.

## **Rigging mode**

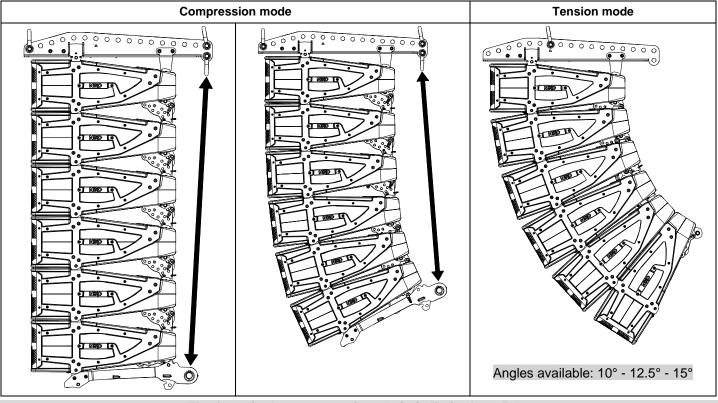

The force in the compression chain is limited to 750kg Use VXT-LEVA750



- Read this document before using.
- Keep this document.

- Observe all warnings and cautions.



- NEXO cannot accept responsibility for accidents caused by any factor other than defects in this product itself. ٠
- Please check the web site <u>nexo-sa.com</u> for the latest update.



- Read this document before using.

Keep this document.Observe all warnings and cautions.

