




ePS10

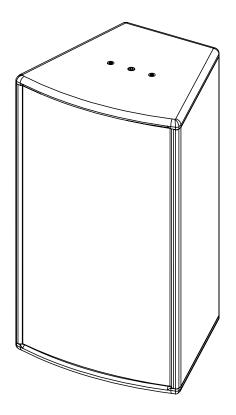

User manual



TABLE OF CONTENTS

| TABLE OF CONTENTS | 2 |
|--------------------------|----|
| WARNINGS | |
| EQUIPMENT | 4 |
| DESCRIPTION | 5 |
| PRESET | |
| HF DIRECTIVITY | |
| CROSSOVER FREQUENCY | |
| ACCESSORIES | 9 |
| ARRAY EQ | 14 |
| MAINTENANCE | 15 |
| TECHNICAL SPECIFICATIONS | 17 |
| USER NOTES | 18 |

EU Conformity declaration

We, NEXO SA

ZA DU PRE DE LA DAME JEANNE

60128 PLAILLY - France

Declare under our sole responsibility that the product
Loudspeaker

Type ePS10

Serial number On the product

Is in conformity with the provisions of the following directive 2014/35/UE (Low Voltage Directive)

including all applicable amendments:

Applied rules and standards: EN 12100, EN 13155, EN 62368

Plailly, October, 2021 Joseph CARCOPINO, R&D Director

Page 2 / 19 ePS10

WARNINGS

PRECAUTIONS

Do not open the speaker, do not try to disassemble it neither to modify it in any way. The system doesn't include any user-repairable part.

If the system seems to be malfunctioning or damaged, stop using it at once and have it repaired by a NEXO qualified technician.

Do not expose the system directly to the sun or to the rain, do not immerse it into fluids, do not place objects filled with liquid on the system. If a liquid gets into the system, please have it inspected by a NEXO qualified technician.

The connection should be performed by qualified technician, by ensuring that power is off.

Operating temperature with temperate climate: 0°C to +40°C (+32°F to +104); -20°C à +60°C (-4°F to +140°F) for storage.

SAFETY INFORMATIONS

Read this manual before using the speaker.

Keep this manual available for further reference.

Observe all warnings and cautions.

Please check the NEXO Web site <u>nexo-sa.com</u> to get the most up-to-date version of this manual.

Ensure you are aware of the safety rules applying to rigging, stacking or installing on tripod or speaker stand. Failure to observe these rules may expose persons to potential wounds or even death.

Only use the system with accessories specified by NEXO.

Please always consult a NEXO-accredited technician if the installation needs architectural works and observe following precautions:

Mounting Precautions:

- Please select screws and mounting location supporting 4 times the system weight.
- Do not expose the system to excessive dust, vibrations, to extreme cold or hot temperatures, to reduce the risk of damaging components.
- Do not place the system in an unstable position: it could fall accidentally.
- If the system is used on a tripod, please ensure the tripod's specifications are adapted and that its height does not exceed 1.40m/55". Do not move the tripod with the system in position.

Connection and Powering Precautions:

- Unplug connected cables before moving the system.
- Power off the system before connecting the system.
- When switching on the installation, the amplifier must be powered last; when switching the installation off, shut off the amplifier first.
- If you work by cold temperatures, progressively raise the level to nominal value during the first minutes of use, to allow the system components to stabilize.

Please check regularly the system condition.

HIGH SOUND PRESSURE LEVELS

Exposure to very high sound pressure levels may cause permanent hearing losses. Degrees of hearing losses may be different from one person to another, but almost everybody will be affected if exposed to high sound pressure levels during a long period of time. The OSHA (Occupational Safety and Health Administration) American Agency specified the following maximal exposures:

| Number of Hours | Sound Pressure Level (dBA), Slow Response |
|-----------------|--|
| 8 | 90 |
| 6 | 92 |
| 4 | 95 |
| 3 | 97 |
| 2 | 100 |
| 1 ½ | 102 |
| 1 | 105 |
| 1/2 | 110 |
| 1/4 or less | 115 |



WASTE OF ELECTRIC OR ELECTRONIC EQUIPMENT

This symbol on the product or its packaging indicates that this product must not be treated as household waste. Instead, it is your responsibility to hand it over to a designated collection point for the recycling of waste electrical and electronic equipment. By ensuring your waste equipment is recycled, you will help prevent potential negative consequences for the environment and human health, which could appear if this product was not recycled. Recycling helps spare natural resources. For more information about the recycling of this product, please contact your local city office, your household waste disposal service or your reseller.


ePS10 Page 3 / 19


EQUIPMENT

On each side of the cabinet, two M6 with 80 mm pitch plus one M10 fittings will connect the ePS10 to accessories (VNI-HCPL535, VNU-BUMP, VNU-HBRK535, or eye-bolts).


The back of the speaker is fitted with 3x M6 (70mm pitch) to connect wallmount in both vertical and horizontal positions (VNI-WM02).

2 pairs (In/Out) of 7.62 mm pitch screw terminal blocks. Cables from 0.75 mm2 to 3.31 mm2 (12 to 15 AWG) copper section.

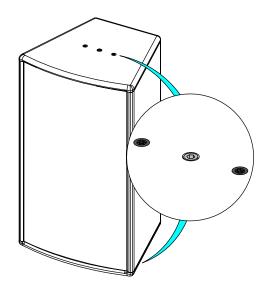

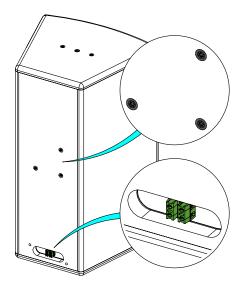


ePS8 with IPCov

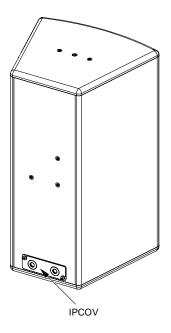

Page **4** / **19** ePS10


DESCRIPTION


- → The ePS10 is a compact full-range 2 ways speaker
- → Asymmetrical HF dispersion "PS" type.
- → ePS10 can be used alone or with eLS400 or eLS600 subwoofer
- → The speaker is equipped with 2 pairs (In/Out) of screw terminal blocks, permissible cables from 0.75 mm² to 3.31 mm² (12 to 15 AWG) copper section. Cable with maximum outside diameter of 11mm.

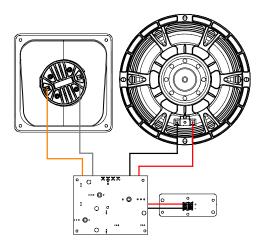

→ To wire ePS10, slit the membrane of the grommet crosswise, pass the cable through and make the connection to the screw terminals. Place the IPCOV.





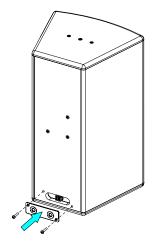

- → IP55: be careful to place the IPCOV correctly.
- → Amplification
 - The ePS10 speakers must be used with a NEXO processor to handle EQ, phase alignment, crossover and excursion/thermal protection for the system loudspeaker.
 - The following table shows the number of ePS10 speakers and eLS600 or eLS18 subwoofers usable with each solution.

| \rightarrow | DTD + DTDAMP4X0.7 | DTD + DTDAMP4X1.3 | NXAMP4X1mk2 | NXAMP4X2mk2 | NXAMP4X4mk2 |
|---------------|------------------------|------------------------|------------------------|---------------------|---------------------|
| ePS10 | 1 per bridged channels | Up to 2 per channel | 1 per channel * | Up to 4 per channel | Up to 4 per channel |
| eLS600 | X | 1 per channel | 1 per channel * | Up to 2 per channel | Up to 2 per channel |
| eLS18 | 1 per bridged channels | 1 per bridged channels | 2 per bridged channels | 1 per channel * | Up to 4 per channel |

ePS10

Page **5** / **19**

^{*} Recommended powering solution

DESCRIPTION


Page **6** / **19** ePS10

Please consult <u>nexo-sa.com</u> for NEXO TD Controllers firmware information.


For the ePS10, the following setups are available:

- ePS10 MAIN PA, 60-120kHz
- ePS10 MAIN PA, 85-120kHz.
- ePS10 MAIN PA, 120-120kHz.


ePS10

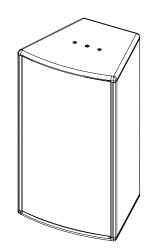

ePS10 + eLS600

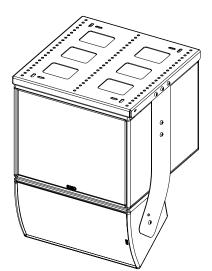

ePS10 + eLS18

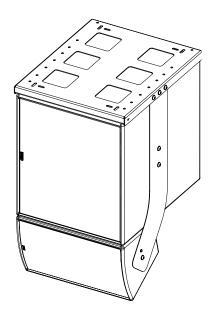


ePS10 Page **7** / **19**

HF DIRECTIVITY


- → The ePS10 speaker can be used in horizontal or vertical position.
- → It's easy to change the HF dispersion to deal with every request.

Place a flathead screwdriver in the space between the grille and Remove the 4 screws that hold the horn. Remove it. the cabinet to release the grille.


Remove the grille.

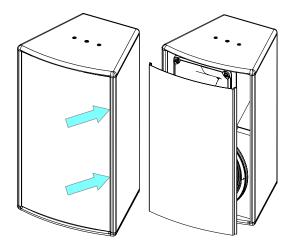


Position the horn according to the desired HF dispersion.

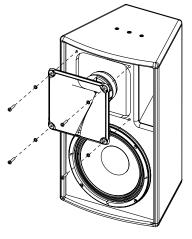

Narrow aperture = widest Dispersion

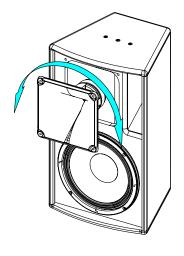

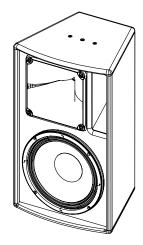



Reassemble the assembly and replace the grille.

CROSSOVER FREQUENCY

- \rightarrow 60 Hz: Full range application.
- → 85, 120 Hz: Use with eLS600.

Page **8** / **19** ePS10

ACCESSORIES

WARNINGS


All ePS accessories are specifically rated in agreement with structural computations.

Never use other accessories when assembling ePS10 cabinets than the ones provided by NEXO: NEXO will decline responsibility if any component is purchased from different supplier.

PROHIBITED: ePS10 below ePS10 or ePS10 below eLS600 without dedicated accessory


VNU-BUMP


LiftBar, can be used with VNI-WMADAPT.

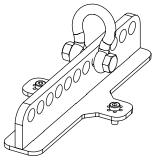

Remove 2 screws on the top Screw VNU-BUMP to ePS10 (use only screws provided with VNU-BUMP). Tight properly.


Refer to the Product Data Sheet

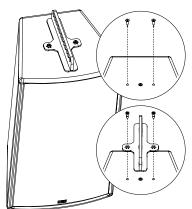

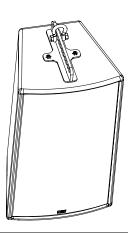

VNT-TCBRK3551

Rotary Truss Clamp



Place VNT-TCBRK3551 on VNU-BUMP at the desired hole.

Refer to the Product Data Sheet.



ePS10 Page 9 / 19

ACCESSORIES

VNU-HBRK535

Horizontal Cradle, usable with:


VNI-CLADAPT.

VNI-WM330.

VNU-PLADAPT

Remove the M10 inserts from each side. Place HBRK535 on ePS10, use only fasteners provided. Tight properly.

Refer to the Product Data Sheet

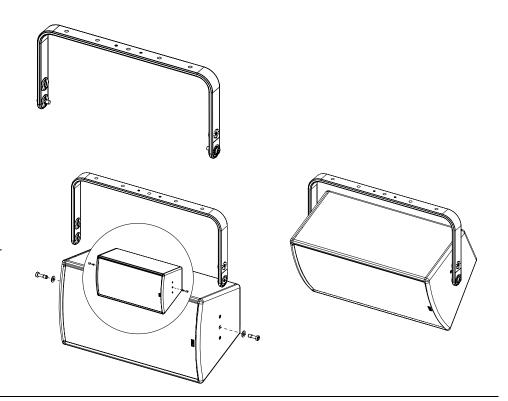



VNI-WMADAPT

Wall mount adapter

Place VNI-WMADAPT on VNU-BUMP, use only fasteners provided. Tight properly.

Refer to the Product Data Sheet

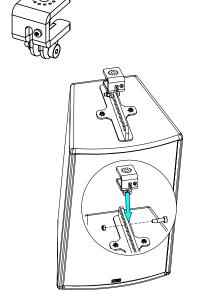

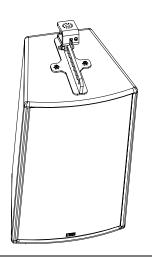


VNI-CLADAPT

Ceiling Adapter, use with VNI-HBRK535.

Screw VNI-CLADAPT to the ceiling (fasteners not provided).

Place the assembly on VNI-CLADAPT, use the 2 guides. Tight with the fasteners provided with VNI-CLADAPT.

Refer to the Product Data Sheet

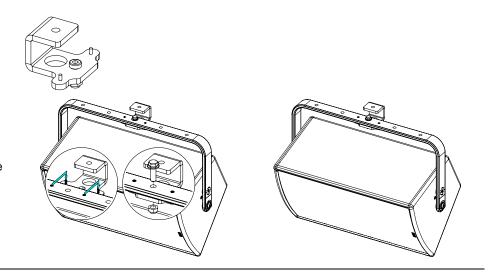


Page 10 / 19 ePS10


VNU-PLADAPT

Pole adapter

Place VNU-PLADAPT on VNI-HBRK535, use only fasteners provided. Tight properly.

Refer to the Product Data Sheet

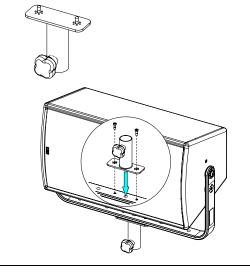

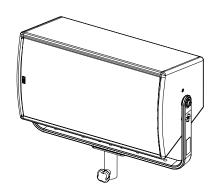


VNI-WM330


Wallmount, usable with:
VNI-WMADAPT / VNU-BUMP
VNU-HBRK535

ePS10 / BUMP / WMADAPT


Place the assembly on VNI-WM330. Tight with the fasteners provided with VNI-WM330.


Refer to the Product Data Sheet

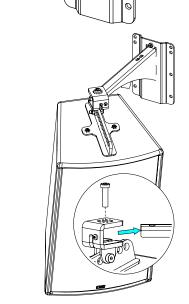

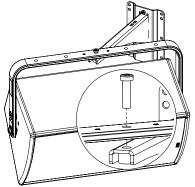

ePS10

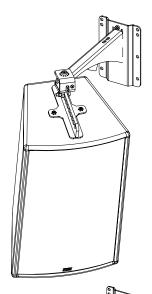

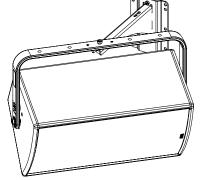

ePS10 / HBRK535

Place the assembly on VNI-WM330. Tight with the fasteners provided with VNI-WM330.

Refer to the Product Data Sheet


Page 11 / 19


ACCESSORIES

VNI-VCPL535

Coupler ePS10 under Vertical eLS18

Refer to the Product Data Sheet

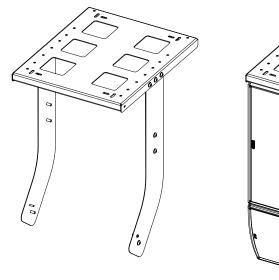


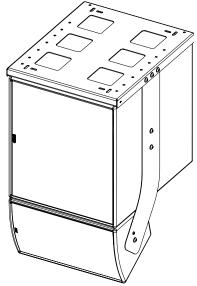


VNI-HCPL535

Coupler ePS10 under horizontal eLS600

Refer to the Product Data Sheet

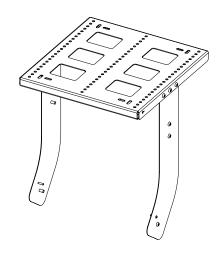

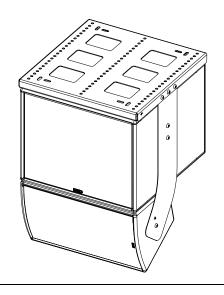

Page **12** / **19** ePS10

VNI-WM02


Wall mount adapter 25kg max



Remove 2 of the 3 screws on the back. Screw speaker plate to ePS10 (use only screws provided with ePS10). Place the speaker holder with ePS10 into wall bracket. Fix by tightening bolted


Refer to the Product Data Sheet


assembly.

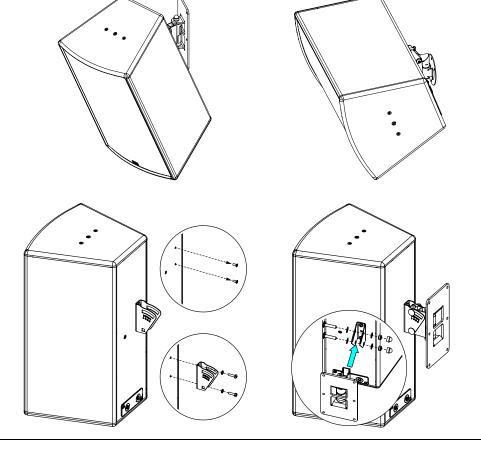

ePS10 Page **13** / **19**

The ArrayEQ allows to adjust the system frequency response in its lower range (see curves below, with different ArrayEq values):

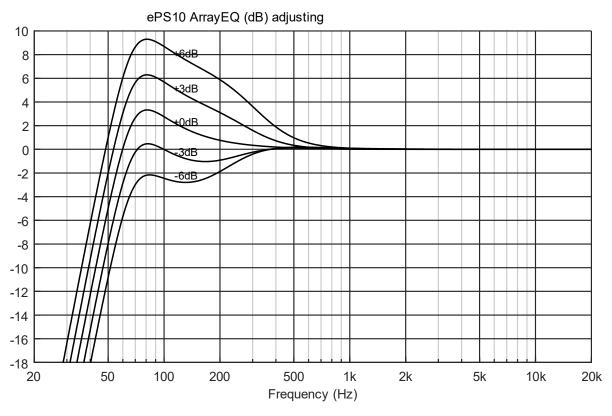

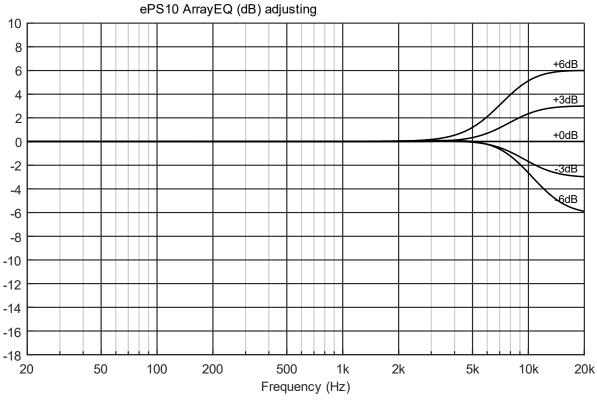

Page **14** / **19** ePS10

MAINTENANCE

NOTE:


Speakers and Grills can be sent back to NEXO for recycling

ePS10


Driver access

Place a flathead screwdriver in the space between the grille and the cabinet to release the grille.

Remove the grille.

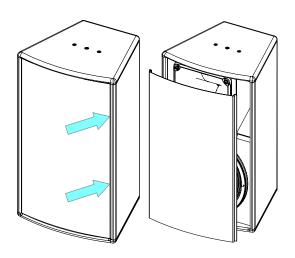

Remove the 4 screws that hold the horn. Remove it. Tightening torque: 2.5 Nm (Thread Locker: Loctite 242)

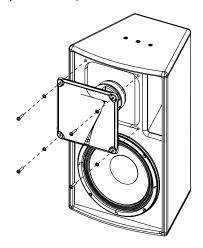


Reassemble the assembly and replace the grille.


LF: red (+) / black (-)
HF: orange (+) / grey (-)

Remove the 4 screws to access the LF driver.

Tightening torque: 3.5 Nm (Thread Locker: Loctite 242)

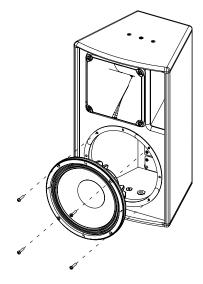



To access the HF diaphragm, remove the 4 screws. Tightening torque: 2.5 Nm

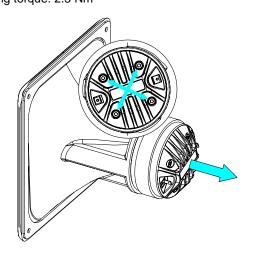

MAINTENANCE

Spare parts

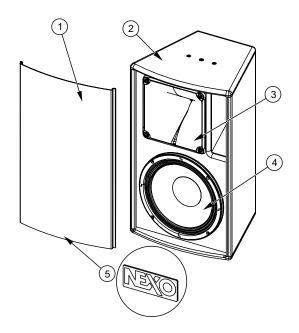

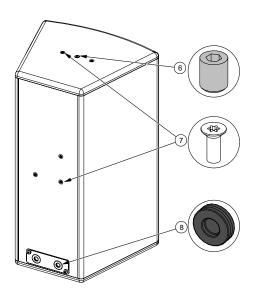

| MARK | QUANTITY | REFERENCE | DESIGNATION |
|------|----------|----------------|-----------------------------------|
| 1 | 1 | 05EPS10-UA | ePS10 Complete grille Black |
| | 1 | 05EPS10-UAPW | ePS10 Complete grille White |
| 2 | 1 | 05EBEPS10 | ePS10 Cabinet Black |
| | 1 | 05EBEPS10-PW | ePS10 Cabinet White |
| 3 | 1 | 05NH14-16R/K | HF diaphragm (with screws) |
| 4 | 1 | 05HPB10N | HP 10" complete (with screws) |
| | 1 | 05HPB10NR/K | Recone Kit 10" (with screws) |
| 5 | 1 | 05LOGNEXO3 | Logo NEXO |
| 6 | 2 | 05VXTSTHC1012N | HEADLESS Screw M10x12 Black (x10) |
| | 2 | 05VXTSTHC1012 | HEADLESS Screw M10x12 White (x10) |
| 7 | 7 | 05VXTCFX616N | VXFX 6x16 Black (x10) |
| | 7 | 05VXTCFX616 | VXFX 6x16 White (x10) |
| 8 | 2 | 05PASF-DG9E1 | Grommet DG11 |
| | 2 | 05PASF-DG11PW | Grommet DG11 White Ø15.5mm (x2) |

Page **16** / **19** ePS10

TECHNICAL SPECIFICATIONS

WITH NEXO ELECTRONICS

| Modèle | ePS10 |
|------------------------|-------------------------|
| Frequency range (±6dB) | 70 Hz – 20 kHz |
| Peak SPL Level (1m) | 130 dB Peak |
| Operating voltage | 32 Vrms |
| Vertical Dispersion | +25°/-30° |
| Horizontal Dispersion: | 50° to 100° asymétrique |
| Crossover Frequency | 70 Hz, 85 Hz, 120 Hz |
| Nominal Impedance | 8 ohms |

SPECIFICATIONS

| Model | ePS10 | |
|-------------------|--|--|
| Components | LF 10" Neodymium long excursion 8 ohms HF 1.4" diaphragm – 8 Ohms | |
| Material | Baltic birch plywood 15mm | |
| Finish | Black or White structural paint (Custom RAL upon request) | |
| Front finish | Black acoustic fabric fitted front steel front grille | |
| Fittings | 2x M6 and 1x M10 on the top and bottom for rigging accessories. 3x M6 on the back for rigging accessories (70mm pitch). | |
| Connector | 2 pairs (In/Out) of 7.62 mm pitch screw terminal blocks. Cables from 0.75 mm² to 3.31 mm² (12 to 15 AWG) copper section. Cable with maximum outside diameter of 11 mm. | |
| Weight | 14.8 kg / 32.6 lb | |
| ID Classification | IP55 with IPCOV | |
| Dimensions | [2,8] [3,1] [3,1] [3,1] [80] | |

ePS10 Page **17** / **19**

USER NOTES

USER NOTES

Page **18** / **19** ePS10

