




GEOM1012-GEOM1025





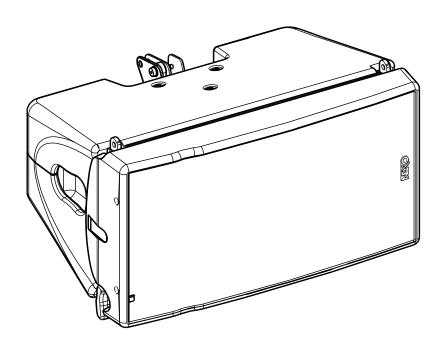

Page 2/17 CONTENTS

CONTENTS

1	CONTENTS	
	WARNINGS	
	GEOM10 RIGGING	
4	GEOM10 - ACCESSORIES	6
5	DESCRIPTION	9
6	PRESET GEOM10	10
7	ARRAY EQ	14
8	MAINTENANCE	15
9	TECHNICAL SPECIFICATIONS	16
10	USER NOTES	17

EU Conformity declaration

We, NEXO SA

ZA DU PRE DE LA DAME JEANNE

60128 PLAILLY - France

Declare under our sole responsibility that the product Loudspeaker

Type GEOM10

Serial number On the product

Is in conformity with the provisions of the following directive including all applicable amendments:

2006/95/CE (Low Voltage Directive)

Applied rules and standards: EN ISO 12100, EN 60065

Plailly, February 07th, 2017 Joseph CARCOPINO, R&D Director

Joseph CARCOPINO, R8

WARNINGS Page 3/17

2 WARNINGS

PRECAUTIONS

Do not open the speaker, do not try to disassemble it neither to modify it in any way. The system doesn't include any user-repairable part. If the system seems to be malfunctioning or damaged, stop using it at once and have it repaired by a NEXO qualified technician.

Do not expose the system directly to the sun or to the rain, do not immerse it into fluids, do not place objects filled with liquid on the system. If a liquid gets into the system, please have it inspected by a NEXO qualified technician.

The connection should be performed by qualified technician, by ensuring that power is off.

Operating temperature with temperate climate: 0°C to +40°C (+32°F to +104); -20°C à +60°C (-4°F to +140°F) for storage.

SAFETY INFORMATIONS

Read this manual before using the speaker.

Keep this manual available for further reference.

Observe all warnings and cautions.

Please check the NEXO Web site <u>nexo-sa.com</u> to get the most up-to-date version of this manual.

Ensure you are aware of the safety rules applying to rigging, stacking or installing on tripod or speaker stand. Failure to observe these rules may expose persons to potential wounds or even death.

Only use the system with accessories specified by NEXO.

Please always consult a NEXO-accredited technician if the installation needs architectural works and observe following precautions:

Mounting Precautions:

- Please select screws and mounting location supporting 4 times the system weight.
- Do not expose the system to excessive dust, vibrations, to extreme cold or hot temperatures, to reduce the risk of damaging components.
- Do not place the system in an unstable position: it could fall accidentally.
- If the system is used on a tripod, please ensure the tripod's specifications are adapted and that it's height does not exceed 1.40m/55". Do not move the tripod with the system in position.

Connection and Powering Precautions:

- Unplug connected cables before moving the system.
- Power off the system before connecting the system.
- When switching on the installation, the amplifier must be powered last; when switching the installation off, shut off the amplifier first.
- If you work by cold temperatures, progressively raise the level to nominal value during the first minutes of use, to allow the system components to stabilize.

Please check regularly the system condition.

HIGH SOUND PRESSURE LEVELS

Exposure to very high sound pressure levels may cause permanent hearing losses. Degrees of hearing losses may be different from one person to another, but almost everybody will be affected if exposed to high sound pressure levels during a long period of time. The OSHA (Occupational Safety and Health Administration) American Agency specified the following maximal exposures:

Number of Hours	Sound Pressure Level (dBA), Slow Response
8	90
6	92
4	95
3	97
2	100
1 ½	102
1	105
1/2	110
1/4 or less	115

WASTE OF ELECTRIC OR ELECTRONIC EQUIPMENT




This symbol on the product or its packaging indicates that this product must not be treated as household waste. Instead, it is your responsibility to hand it over to a designated collection point for the recycling of waste electrical and electronic equipment. By ensuring your waste equipment is recycled, you will help prevent potential negative consequences for the environment and human health, which could appear if this product was not recycled. Recycling helps spare natural resources. For more information about the recycling of this product, please contact your local city office, your household waste disposal service or your reseller.


3 GEOM10 RIGGING

Assembly

Front

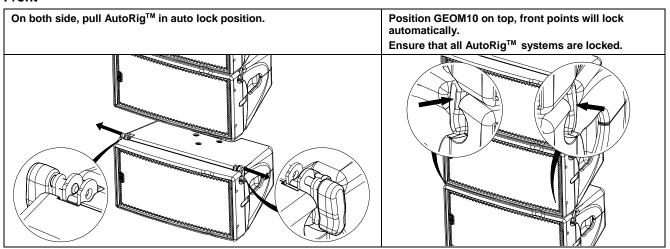


Back

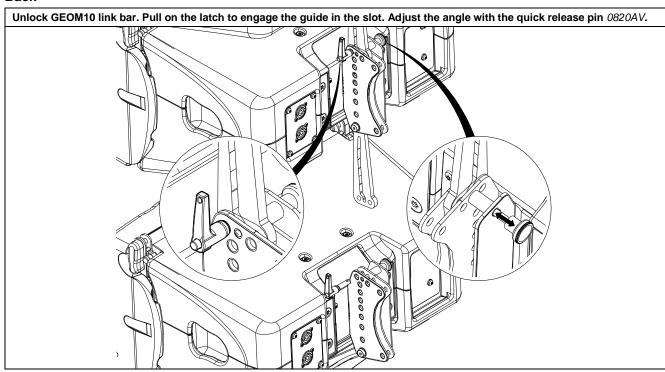


GEOM10 RIGGING Page 5/17

Disassembly


Front (stacked or unflown)

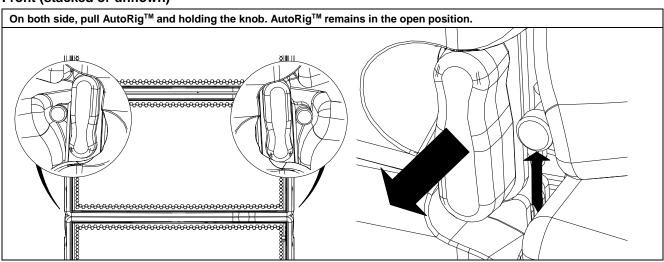

Back

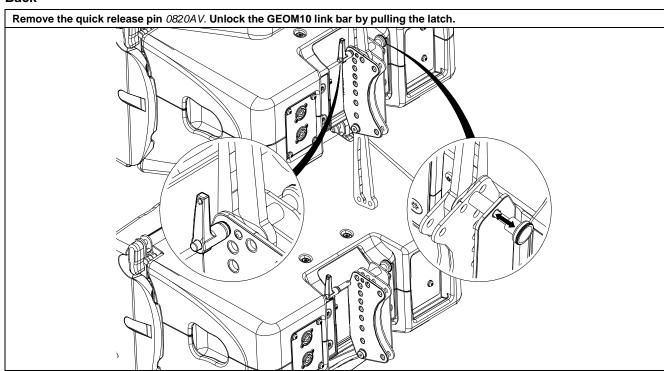

SAFETY: You can replace one of the four screws with an eyebolt (M8), and use a sling (apply thread lock on the eyebolt).

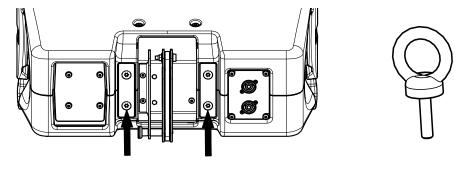

4 GEOM10 - ACCESSORIES


Warnings

All GEOM10 accessories are specifically rated in agreement with structural computations.

Never use other accessories – including push-pins – when assembling GEOM10 cabinets than the ones provided by NEXO: NEXO will decline responsibility over the entire GEOM10 accessory range if any component is purchased from different supplier.

All GEOM10 accessories have been designed so that cabinet are arrayed vertically.

GEOM10 horizontal assemblies as shown in figure below are UNSAFE and STRICTLY PROHIBITED

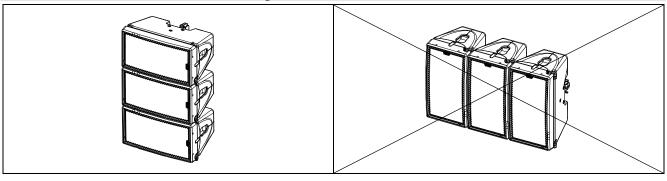


VNT-BUMPM10


- Rated for a maximum of 12 GEOM10 or 8 MSUB15.
- Maximum quantity for flown vertical cluster is:

 $N_{GEOM10} + 1.5*N_{MSUB15} <= 12$


- 2 rigging points 2 points with retractable rings.
- Usable with VNT-EXBARM10 for a one rigging point.
- Ground stack assembly alone, or with VNT-GSTKM10S / VNT-GSTKM10L.
- 2 locations for laser/ inclinometer.
- On each side, an arrow indicates the front.

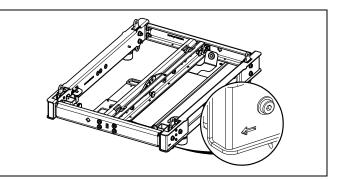

VNT-EXBARM10

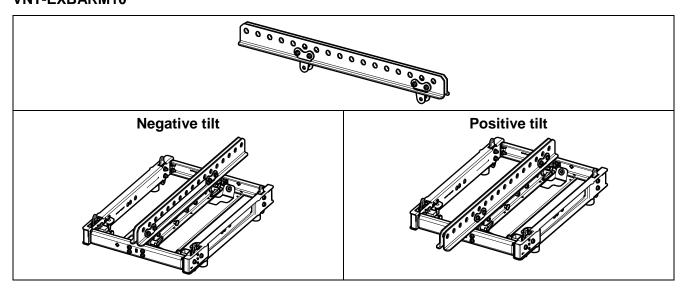


VNT-GSTKM10S - VNT-GSTKM10L

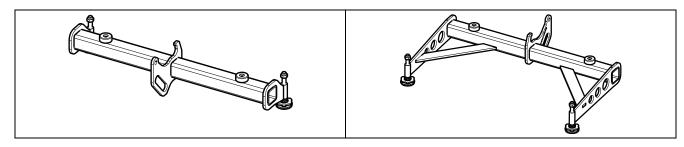


VNT-MNSTKM10

- Rated for a maximum of 3 GEOM10 on the top of MSUB15.

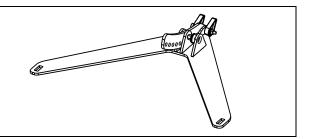


GMT-LBUMPM10

- Rated for a maximum of 12 GEOM10.
- Usable with GMT-EXBARM10L for a one rigging point.

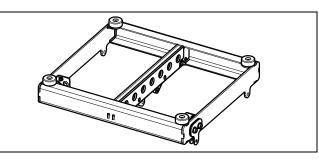


GMT-EXBARM10L

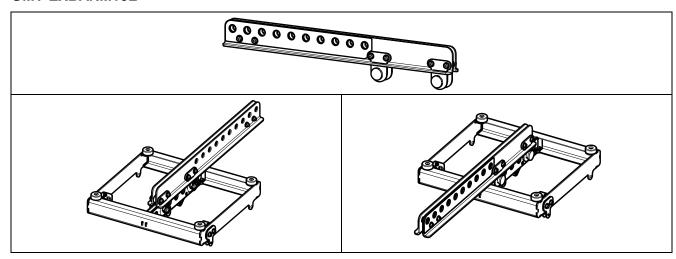


GMT-FLGM10


- Pair of flanges for 120°horizontal directivity.No tools, magnetic clamp.



GMT-3CASEM10

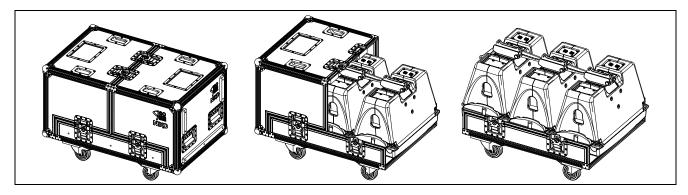

GMT-6CASEM10

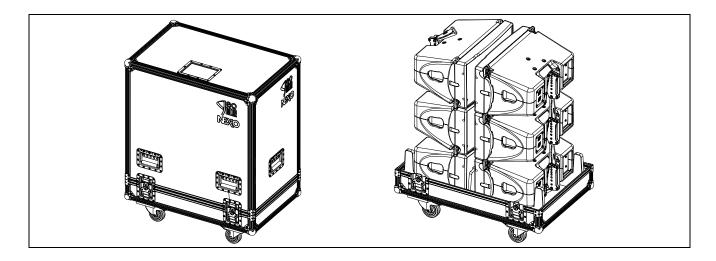

DESCRIPTION Page 9/17

5 DESCRIPTION

- GEOM1012 and GEOM1025 are a compact high-technology line array, 2 way passive, with a 10" LF and a 1.4" HF.

Without tools, you can change the HF horizontal directivity by adding a pair of magnetic flanges.

- GEOM1012: 12° vertical dispersion
- GEOM1025 : 25° vertical dispersion
- Versions :

GEOM1012 : Touring application ; BlackGEOM1012-PW : Touring application ; White


o GEOM1025 : Touring application ; Black

o GEOM1025-PW: Touring application; White

For fixed installations, see user manual GEOM1012-I / GEOM1025-I

Connectors:

- GEOM1012t/1025t: two NL4 connectors, the 4 pins of the 2 sockets are connected in parallel within the enclosure.
- o GEOM10 use 2+/2-, (1+/1- through).

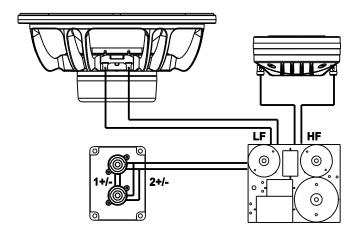

Amplification:

- The GEOM10 cabinets MUST be used with a NEXO processor to handle EQ, phase alignment, crossover and excursion/thermal protection for the system loudspeakers. There are two NEXO processor series supporting the GEOM10 cabinet: NXAMP (4-channel) amplified processors and DTD processors (stereo + sub).
- o The following table shows the number of GEOM10 usable with each solution.

	NXAMP4x1mK2	NXAMP4x1мK2 (bridged)	NXAMP4x2mK2	NXAMP4x4	DTD + DTDAMP4x1.3
GEOM10	1 per channel	Up to 2 per channel	Up to 3 per channel	Up to 4 per channel	Up to 2 per channel
			Recommended		

6 PRESET GEOM10

Please consult $\underline{\text{nexo-sa.com}}$ for NEXO TD Controllers firmware information.


For the **GEOM1012**, with or without directivity flanges, the following setups are available:


- o Setup for one stand-alone box, with high-pass at 63, 75, 85, 95 or 120 Hz.
- o Setup for arrays from 2 to 3 boxes, with high-pass at 63, 75, 85, 95 or 120 Hz.
- o Setup for arrays from 4 to 6 boxes, with high-pass at 63, 75, 85, 95 or 120 Hz.
- o Setup for arrays from 7 to 12 boxes, with high-pass at 63, 75, 85, 95 or 120Hz.
- o Setup for Stack Monitor, with high-pass at 63, 75 or 85 Hz.

For the **GEOM1025**, with or without directivity flanges, the following setups are available:

- o Setup for one stand-alone box, with high-pass at 63, 75, 85, 95 or 120 Hz.
- o Setup for 2 to 3 boxes, with high-pass at 63, 75, 85, 95 or 120 Hz.
- o Setup for Stack Monitor, with high-pass at 63, 75 or 85 Hz.

- o Default Cross over on one box 63 Hz Front Fill, multi-diff, sound reinforcement all short throw application;
- o High SPL Small system using 2x GEOM10 and 2x MSUB15 in 85 Hz;

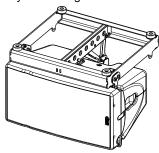

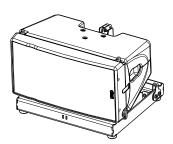


> 2 - 3 Boxes

 For small flying configuration, mid throw application used at 63 Hz without MSUB15 and default 85 Hz with MSUB15 at 85 Hz too.







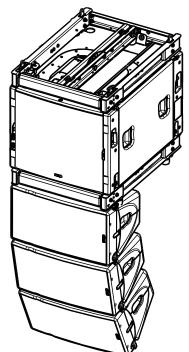

PRESET GEOM10 Page 11/17


 Possibilities to use 2-3Box setup in stack configuration using MSUB15 in OMNI or CARDIO mode with 1 Back and 2 front and 3 GEOM10 on top of them, application venue up to 15 meters, default cross over 85 Hz but small overlap could have impact if needed, for example (MSUB15 120 Hz and GEOM10 75 Hz).

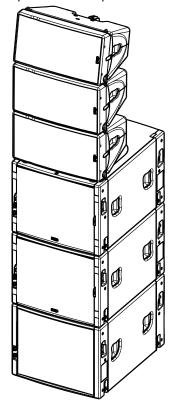


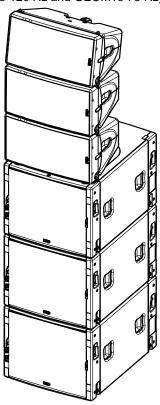

4 - 6 Boxes


 For long throw flying application used in GEOM10 at 63 Hz without Sub and GEOM10 at 85 Hz with flying MSUB15 in cardio mode at 95 Hz.

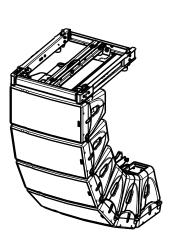

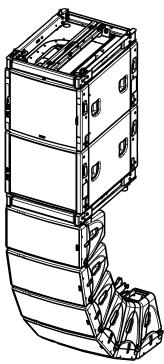


PRESET GEOM10

 For long throw stacking application on floor or on MSUB15, up to 6 boxes used at 63 Hz without Sub and 85 Hz with MSUB15 at 85 Hz.

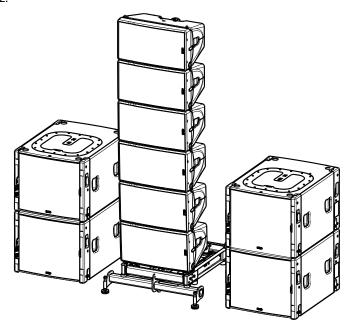


> <u>7 - 12 Boxes</u>

 For very long throw application used with Sub either ground stack or flying, recommended MSUB15 cardioid mode, cross over MSUB15 95 Hz and 12 GEOM10 cross over 75 Hz for maximum impact. Don't forget to put HF Waveguide either to the exterior or the interior of the venue.

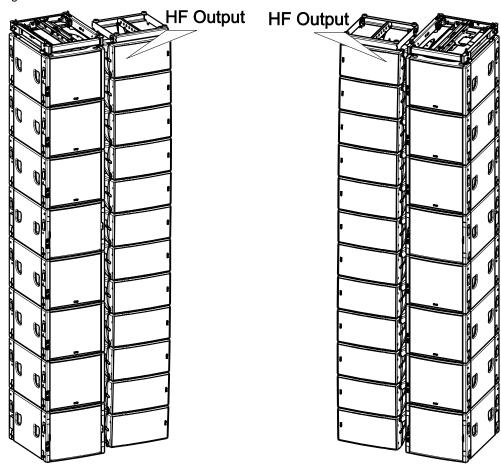


PRESET GEOM10 Page 13/17

o Ground Stack Sub design is:

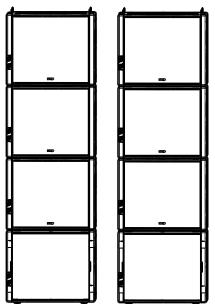

> GEOM10 MON and MSUB15 MON

- o Minimum phase setup not compatible with others.
- o Used for high power stage Monitor, DJ Monitor, Drum Fill, Stack side.
- Always use same cross over between GEOM10 and MSUB15, no overlap possible without doing phase adjustment by yourself.
- o Very high LF headroom.
- o Clarity adjustment using -3dB on ArrayEQ 75 Hz crossover default.

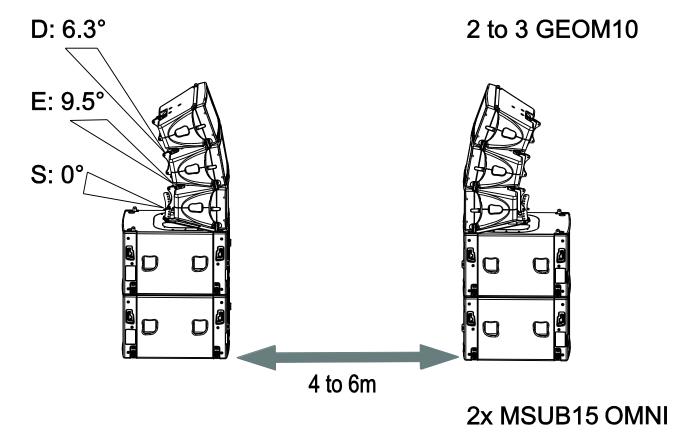


Page 14/17 ARRAY EQ


7 ARRAY EQ

The ArrayEQ allows to adjust the system frequency response in its lower range (see curves below, with different ArrayEq values):

GEOM10

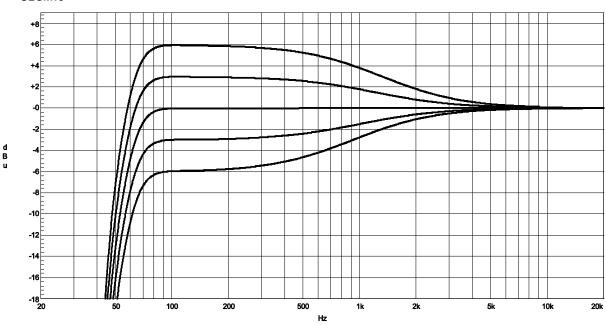


- GEOM10 STACK MON

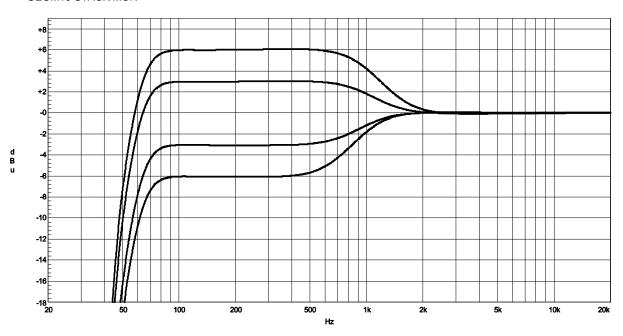


MAINTENANCE Page 15/17

8 MAINTENANCE

8.1 Front panel disassembly

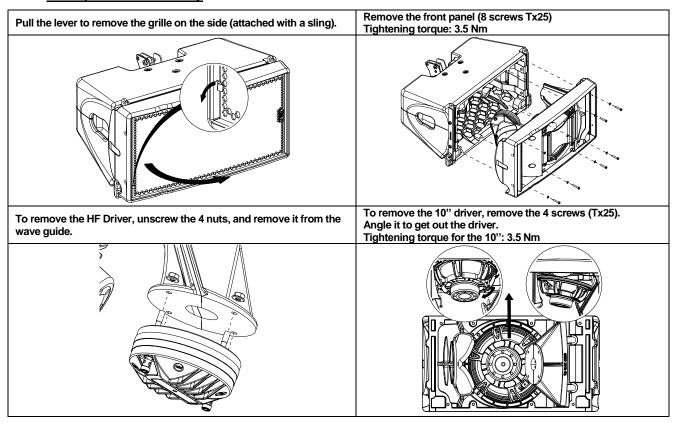

8.2 Spare parts

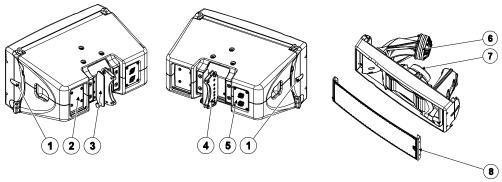

			\sim
MARK	QUANTITY	REFERENCE	DESIGNATION
1	2	05LEXM1012	Lexan GEOM1012 black
	2	05LEXM1012-PW	Lexan GEOM1012 white
	2	05LEXM1025	Lexan GEOM1025 black
	2	05LEXM1025-PW	Lexan GEOM1025 white
2	1	05LEXWAR	Lexan Warning
3	1	05LEXRIG-EXP	Lexan Rigging Explain
4	1	05LEXRIG-ANG	Lexan Rigging Angles
5	1	05LEXCNX-M1012	Lexan CNX GEOM1012
	1	05LEXCNX-M1025	Lexan CNX GEOM1025
6	1	05HPADE68-16	HF Driver complete (with screws)
	1	05NH68-16R/K	HF Diaphragm
7	1	05HPB10N	10" Driver
	1	05HPB10NR/K	Recone Kit HPB10N
8	1	05GEOM10-UA	Complete grille Touring Black
	1	05GEOM10-UAW	Complete grille Touring White

9 TECHNICAL SPECIFICATIONS

GEOM10 WITH NEXO ELECTRONICS

Model	GEOM10	
Frequency range (±6dB)	59Hz – 20kHz	
Sensibility (1W / 1m)	100dB SPL Nominal	
Peak SPL Level (1m)	136dB Peak	
Operating voltage	30 Vrms (180 Vpeak)	
Vertical Dispersion	12° pour GEOM1012 25° pour GEOM1025	
Horizontal Dispersion	80° or 120° (with magnetic flanges GMT-FLGM10))	
Crossover Frequency	LF-HF : 1.3kHz Passive	
Nominal Impedance	8Ω	
Recommended Amplification	750 W per cabinet	

CARACTÉRISTIQUES

Model	GEOM10			
Components	LF: 1x 10" - 8Ω - Long excursion – Neodymium driver with PDD [™] HF: 1.4" throat driver on a BEA/FEA optimized HRW [™]			
Material	Lightweight polyurethane composite			
Finish	Black or white structural paint			
Front finish	Steel front grille Black or white paint Black or white mesh			
Fittings	2 horizontal handles 2 vertical handles Semi-auto front rigging			
Weight	21 kg – 46.3 lb			
Dimensions [Inches] / mm	[20,9] [15,9] 404			

USER NOTES Page 17/17

10 USER NOTES

France Nexo S.A.

Parc d'activité de la Dame Jeanne

F-60128 PLAILLY Tel: +33 3 44 99 00 70 Fax: +33 3 44 99 00 30 E-mail: info@nexo.fr

nexo-sa.com