





P15-I

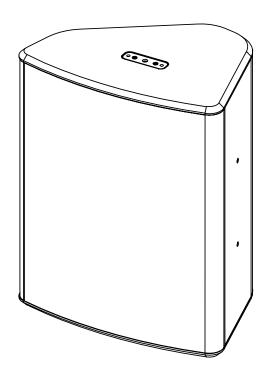

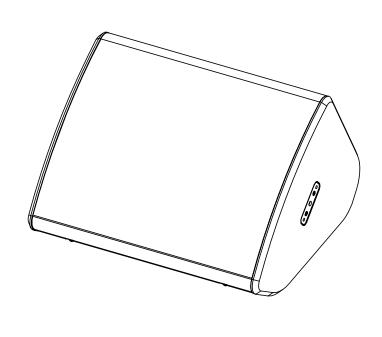

User manual



TABLE OF CONTENTS

ABLE OF CONTENTS	
WARNINGS	
EQUIPMENT	4
DESCRIPTION	
PRESET	
HF DIRECTIVITY	
CROSSOVER FREQUENCY	
ACCESSORIES	9
ARRAY EQ	14
MAINTENANCE	15
TECHNICAL SPECIFICATIONS	17
USER NOTES	18

EU Conformity declaration

We, NEXO SA

ZA DU PRE DE LA DAME JEANNE

60128 PLAILLY - France

Declare under our sole responsibility that the product
Loudspeaker

Type P15

Serial number On the product

Is in conformity with the provisions of the following directive 2014/35/UE (Low Voltage Directive)

including all applicable amendments:

Applied rules and standards: EN 13155, EN 62368

Plailly, December, 2020 Joseph CARCOPINO, R&D Director

Page 2 / 20 P15-I

WARNINGS

PRECAUTIONS

Do not open the speaker, do not try to disassemble it neither to modify it in any way. The system doesn't include any user-repairable part.

If the system seems to be malfunctioning or damaged, stop using it at once and have it repaired by a NEXO qualified technician.

Do not expose the system directly to the sun or to the rain, do not immerse it into fluids, do not place objects filled with liquid on the system. If a liquid gets into the system, please have it inspected by a NEXO qualified technician.

The connection should be performed by qualified technician, by ensuring that power is off.

Operating temperature with temperate climate: 0°C to +40°C (+32°F to +104); -20°C à +60°C (-4°F to +140°F) for storage.

SAFETY INFORMATIONS

Read this manual before using the speaker.

Keep this manual available for further reference.

Observe all warnings and cautions.

Please check the NEXO Web site <u>nexo-sa.com</u> to get the most up-to-date version of this manual.

Ensure you are aware of the safety rules applying to rigging, stacking or installing on tripod or speaker stand. Failure to observe these rules may expose persons to potential wounds or even death.

Only use the system with accessories specified by NEXO.

Please always consult a NEXO-accredited technician if the installation needs architectural works and observe following precautions:

Mounting Precautions:

- Please select screws and mounting location supporting 4 times the system weight.
- Do not expose the system to excessive dust, vibrations, to extreme cold or hot temperatures, to reduce the risk of damaging components.
- Do not place the system in an unstable position: it could fall accidentally.
- If the system is used on a tripod, please ensure the tripod's specifications are adapted and that its height does not exceed 1.40m/55". Do not move the tripod with the system in position.

Connection and Powering Precautions:

- Unplug connected cables before moving the system.
- Power off the system before connecting the system.
- When switching on the installation, the amplifier must be powered last; when switching the installation off, shut off the amplifier first.
- If you work by cold temperatures, progressively raise the level to nominal value during the first minutes of use, to allow the system components to stabilize.

Please check regularly the system condition.

HIGH SOUND PRESSURE LEVELS

Exposure to very high sound pressure levels may cause permanent hearing losses. Degrees of hearing losses may be different from one person to another, but almost everybody will be affected if exposed to high sound pressure levels during a long period of time. The OSHA (Occupational Safety and Health Administration) American Agency specified the following maximal exposures:

Number of Hours	Sound Pressure Level (dBA), Slow Response
8	90
6	92
4	95
3	97
2	100
1 ½	102
1	105
1/2	110
1/4 or less	115

WASTE OF ELECTRIC OR ELECTRONIC EQUIPMENT

P15-I




This symbol on the product or its packaging indicates that this product must not be treated as household waste. Instead, it is your responsibility to hand it over to a designated collection point for the recycling of waste electrical and electronic equipment. By ensuring your waste equipment is recycled, you will help prevent potential negative consequences for the environment and human health, which could appear if this product was not recycled. Recycling helps spare natural resources. For more information about the recycling of this product, please contact your local city office, your household waste disposal service or your reseller.

EQUIPMENT

3 locations for hanging, 1 on the back and on both sides.

WARNING: The depth of the M10 thread is 14mm (0.55 inch).

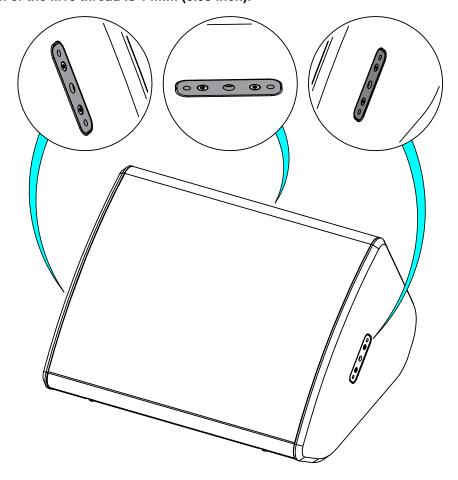

Assembly on distance rod or speaker stand

Place distance rod on the connector plate (M20) of the Sub. Place PLADAPT on P15-I.

Put the assembly on the distance rod / monitor stand (diameter of 35mm),

IMPORTANT


Speaker stand must be rated for P15 weight.

Speaker stand must always be installed on a horizontal surface.

Stand height and footprint must be defined to prevent assembly from collapsing.

Ensure that audience is not allowed within a safety area which radius is equal or higher than assembly height.


Test steadiness of the assembly by pushing in all directions.

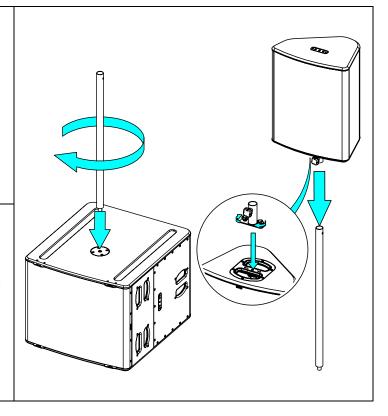

Page 4 / 20 P15-I

DESCRIPTION

- The P15 is a compact full-range coaxial speaker
- → P15 HF Dispersion:
 - 60° 60° with standard horn
 - 90° 40° with PNU-P15FLG9040
 - PS with PNU-P15FLGPS (Asymmetrical Dispersion)
- → P15 can be used alone or with L18 subwoofer
- → The speaker is equipped with a cable gland (clamping range, Ø 5 to 12 mm), supplied with a fixed cable (HO7ZZ-F), 2 x 1.5mm² section, length 4m, outside diameter 8mm ±1mm.
- → (+) Red/Brown / (-) Black/Blue

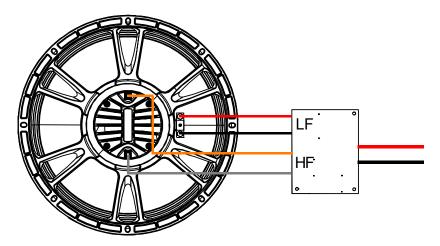

→ Amplification

- The P15 speakers must be used with a NEXO processor to handle EQ, phase alignment, crossover and
 excursion/thermal protection for the system loudspeaker. There are two NEXO processor series supporting the P15
 speakers: NXAMP (4 channels) amplified processors and DTD processors (stereo + sub). DTD processors ensure
 optimal performances when used with DTDAMP power amplifiers.
- The following table shows the number of P15 speakers and L18 subwoofers usable with each solution.

	NXAMP4X1mk2 (BRIDGED)	NXAMP4X2mk2	NXAMP4X4mk2
P15	Up to 2 per channel	Up to 2 per channel	Up to 4 per channel
L18	1 per channel	1 per channel	Up to 2 per channel

P15-I

Page **5** / **20**

PRESET

Please consult nexo-sa.com for NEXO TD Controllers firmware information.


For the P15, the following setups are available:

- → MAIN is the recommended setup for most FOH application, similar to previous firmware setup.
- → MONITOR is recommended for monitor applications. Warning: this setup is a low latency setup and therefore its phase is not compatible with other NEXO cabinets, including subs.

Preset


- P15 MON PA 6060, with high-pass at 57 or 85 Hz.
- P15 MON PA 9040, with high-pass at 57 or 85 Hz.
- P15 MON PA PSguide, with high-pass at 57 or 85 Hz
- P15 MAIN PA 6060, with high-pass at 57, 85 or 120 Hz.
- P15 MAIN PA 9040, with high-pass at 57, 85 or 120 Hz.
- P15 MAIN PA PSguide, with high-pass at 57, 85 or 120 Hz.


P15

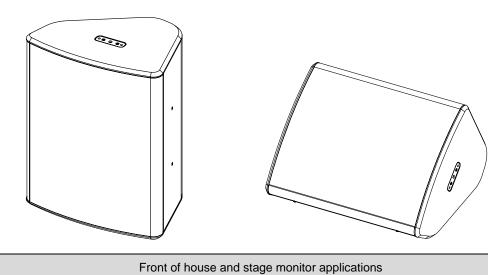


Page 6 / 20 P15-I


P15 + Sub

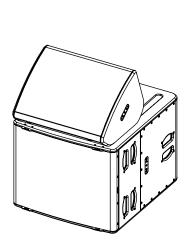


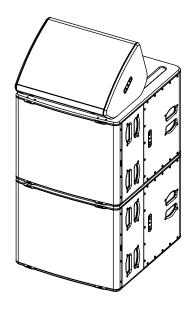


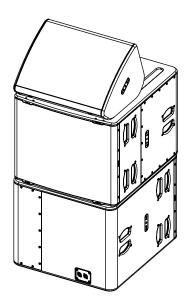

Stage monitor applications with Subs (OMNI or CARDIO modes)

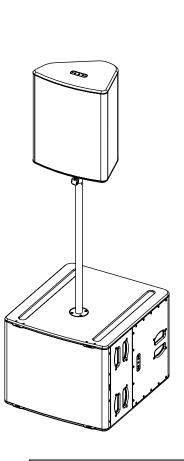

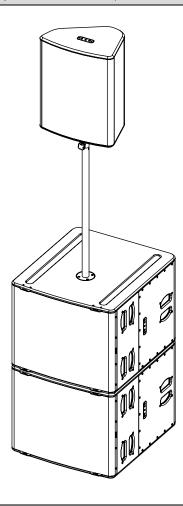

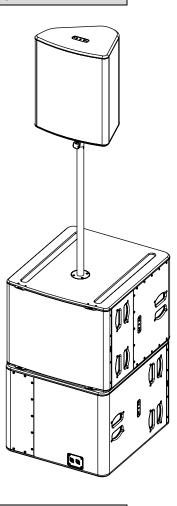

Front of house applications with Subs (OMNI or CARDIO modes)


P15-I

Page **7** / **20**


HF DIRECTIVITY

- → The P15 speaker can be used in horizontal or vertical position.
- → The standard horn is a 60° 60° HF dispersion. It's easy to change the HF dispersion by adding a specific flange. Different mounting possibilities and flange rotation allow to deal with every request.


Loosen the 2 screws, Remove the grille.

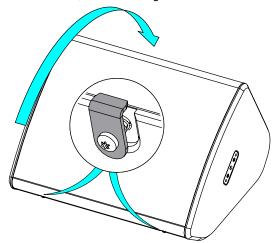


Place the flange, if necessary, rotate it.

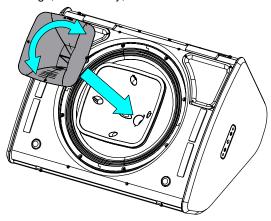

Remove the 4 HF Cap.

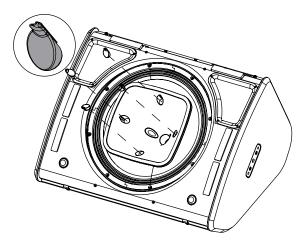

Magnets keep the horn in place.

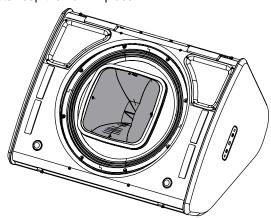

When replacing the grille, ensure it is well positioned in the top blade before fasten the hooks with the screws.

CROSSOVER FREQUENCY

- → 57 Hz: Full range application.
- → 85 Hz: Use as « front fill » on stage, complementing a main system. Use with a NEXO subwoofer, e.g. L18.
- → 120 Hz: For long throw applications.

Page 8 / 20 P15-I

ACCESSORIES

WARNINGS


All P15 accessories are specifically rated in agreement with structural computations.

Never use other accessories – including push-pins – when assembling P15 cabinets than the ones provided by NEXO: NEXO will decline responsibility over the entire P15 accessory range if any component is purchased from different supplier.

PROHIBITED: P15 below P15 or P15 below L18 without dedicated accessory

VNU-BUMP (PNT-BUMP)


LiftBar, use with P15, LIFTADAPT, WMADAPT.

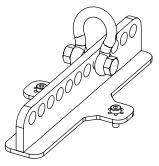

Place VNU-BUMP on P15 (only use the provided screws).


Tight properly

Refer to the Product Data Sheet.

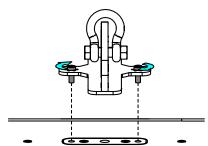

VNU-HBRK600 (PNT-HBRK15)


Horizontal Cradle, use with P15, CLADAPT, PLADAPT.

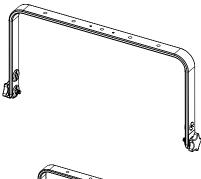


Place HBRK600 on P15, use only fasteners provided.

Tight properly.

Refer to the Product Data Sheet.

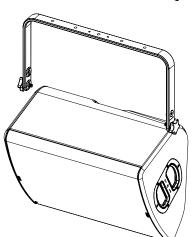

P15-I

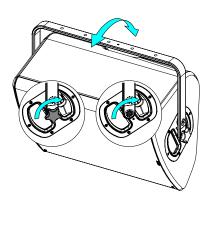


Page **9** / **20**

ACCESSORIES

VNU-PLADAPT (PNT-PLADAPT)


Pole adapter, use with P15, HBRK600, VBRK15.

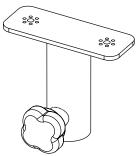

Place VNU-PLADAPT, use only fasteners provided.


Tight properly.

Refer to the Product Data Sheet.

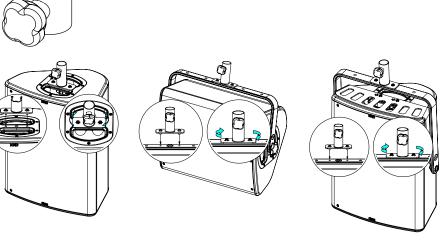

PNU-VBRK15 (PNT-VBRK15)

Vertical Cradle, use with CLADAPT, PLADAPT.

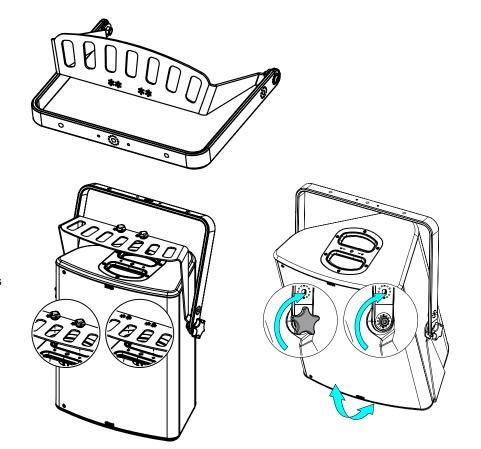


Place VBRK15 on P15, use only fasteners provided.


Tight properly.


Refer to the Product Data Sheet.

VNI-WMADAPT (PNT-WMADAPT)

Adapter, use with VNU-BUMP, VNI-WM380.



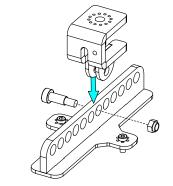


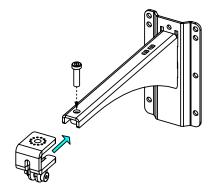

Refer to the Product Data Sheet.


VNI-CLADAPT (PNI-CLADAPT)


Ceiling adapter, use with VNU-HBRK600, PNU-VBRK15.




Place the assembly on CLADAPT, use the 2 guides. Tight with the fasteners provided with CLADAPT.

Refer to the Product Data Sheet.

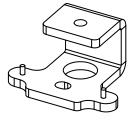

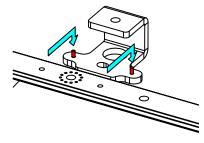

P15-I

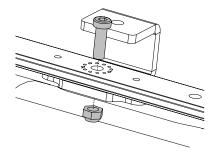

Page **11** / **20**


ACCESSORIES


PNI-P15TOL18 PNI-P15TO2L18

P15 Under 1xL18

P15 Under 2xL18 (Omni or Cardio)


Refer to the Product Data Sheet.

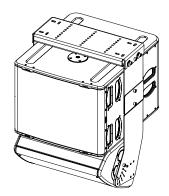

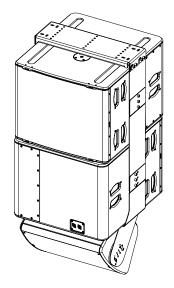

VNI-WM380 (PNI-WM380)


Wallmount for P15, use with WMADAPT.

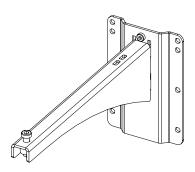


Mount the wall plate. Place the arm in the wall plate.

Lock with the provided screw.

Refer to the Product Data Sheet.

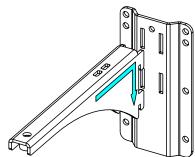

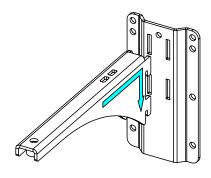


PNU-P15FLGPS (PNT-P15FLGPS)


HF Dispersion Horn 'PS'

Remove the grille, remove the flange to place the PNU-P15FLGPS.

If it necessary, rotate it. Magnets keep the horn in place.

Refer to the Product Data Sheet.

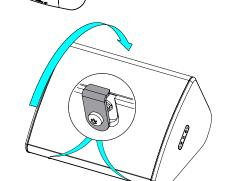

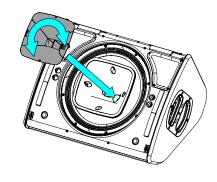

PNU-P15FLG9040 (PNT-P15FLG9040)


HF Dispersion Horn 90° - 40°

Remove the grille, remove the flange to place the PNU-P15FLG9040.


If it necessary, rotate it. Magnets keep the horn in place.

Refer to the Product Data Sheet.



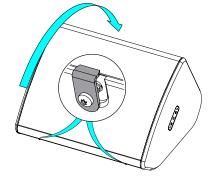


P15-I

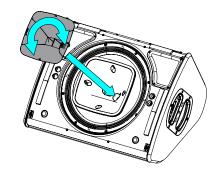

Page **13** / **20**

ARRAY EQ


The ArrayEQ allows to adjust the system frequency response in its lower range (see curves below, with different ArrayEq values):

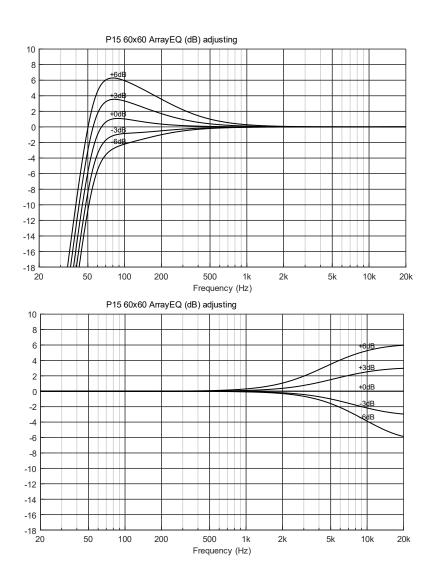


MAINTENANCE

Driver access


Loosen the 2 screws, Remove the grille.

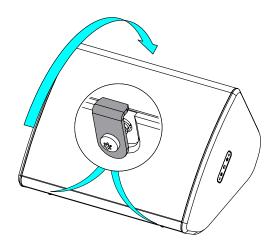

Remove the stickers.

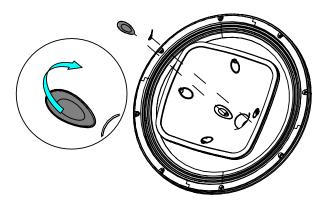


Remove the horn.

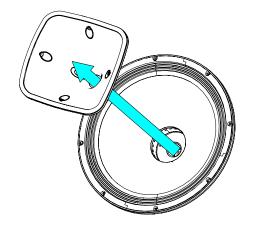

Remove 8 screws.


Tightening torque: 3.5 Nm (Thread Locker: Loctite 242)

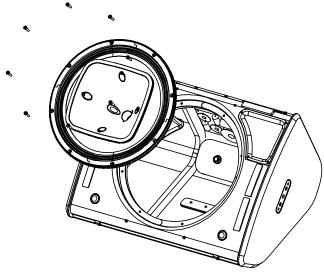

Remove the 2 screws.

P15-I


Tightening torque: 2.5 Nm (Thread Locker: Loctite 222)

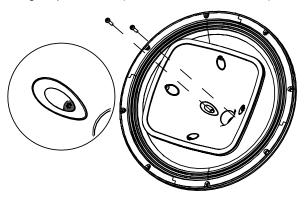

To access to the HF diaphragm, remove 4 screws. Tightening torque: 2 Nm



Spare parts

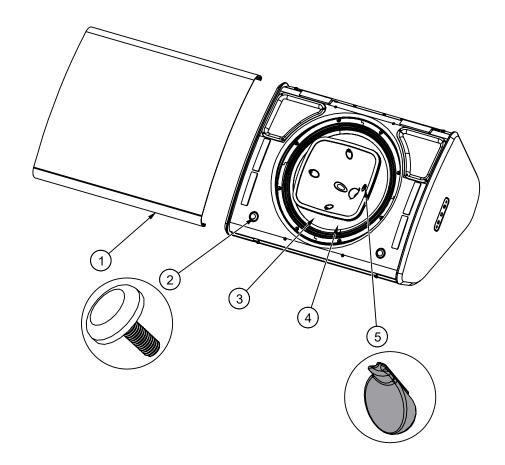

MARK	QUANTITY	REFERENCE	DESIGNATION
1	1	05P15UA-I	Complete grille Instal Black (with fasteners)
	1	05P15UA-IPW	Complete grille Instal White (with fasteners)
2	2	05RUBGRD01	Plastic Pad Black
	2	05RUBGRD01-PW	Plastic Pad White
3	1	05HPC15	P15 driver complete (with screws)
	1	05HPC15R/K	Recone Kit 15" (with screws)
4	1	05NHP15R/K	HF diaphragm (with screws)
5	4	05CAPB01	HF cap black
	4	05CAPB01-PW	HF cap White

NOTE:

Speakers and Grills can be sent back to NEXO for recycling

TECHNICAL SPECIFICATIONS

P15-I WITH NEXO ELECTRONICS

Model	P15-I
Frequency range (±6dB)	57 Hz – 20 kHz
Peak SPL Level (1m)	139dB Peak
Operating voltage	55Vrms (180Vpeak)
HF dispersion (according to horns)	60°x60° - 90°x40° - Asymmetrical Dispersion 50° to 90°x40°
Crossover Frequency	57Hz – 85 Hz – 120 Hz
Nominal Impedance	8Ω

SPECIFICATIONS

Model	P15-I	
Components	LF: 1x15" - 8Ω; HF: 1x 3 " - 8Ω - Neodymium driver	
Material	Baltic birch / Poplar plywood	
Finish	Black or white structural paint	
Front finish	Black or white acoustic fabric fitted front steel front grille	
Fittings	Threated inserts on the back and on both sides for connection of mounting accessories	
Connector	Cable gland, supplied with a fixed cable 2 x 1.5mm² section, length 4m.	
Weight	23 kg / 51 lb	
Dimensions	[19.0] [13.7] [13.7] [13.7] [13.7] [13.7]	

P15-I

Page **17** / **20**

USER NOTES

USER NOTES

USER NOTES

P15-I Page **19** / **20**

